


XWBL

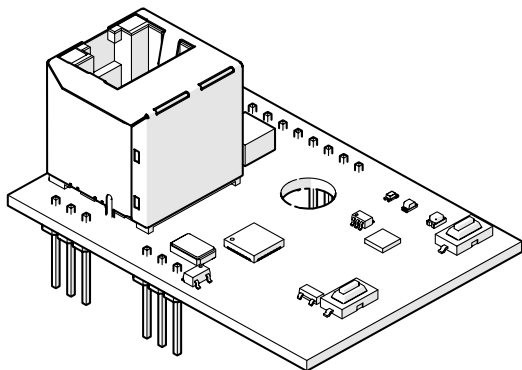

IT

EN

FR

DE

ES

NL

SV

PL

FAAC

© Copyright FAAC S.p.A. dal 2020. Tutti i diritti riservati.

Nessuna parte di questo manuale può essere riprodotta, archiviata, distribuita a terzi né altrimenti copiata, in qualsiasi formato e con qualsiasi mezzo, sia esso elettronico, meccanico o tramite fotocopia, senza il preventivo consenso scritto di FAAC S.p.A.

Tutti i nomi e i marchi citati sono di proprietà dei rispettivi fabbricanti.

I clienti possono effettuare copie per esclusivo utilizzo proprio.

Questo manuale è stato pubblicato nel 2020.

© Copyright FAAC S.p.A. depuis 2020. Tous droits réservés.

Aucune partie de ce manuel ne peut être reproduite, archivée ou distribuée à des tiers ni copiée, sous tout format et avec tout moyen, qu'il soit électronique, mécanique ou par photocopie, sans le consentement écrit préalable de FAAC S.p.A.

Tous les noms et les marques cités sont la propriété de leurs fabricants respectifs.

Les clients peuvent faire des copies pour leur usage exclusif.

Ce manuel a été publié en 2020.

© Copyright FAAC S.p.A. rok 2020. Wszelkie prawa zastrzeżone.

Zabronione jest kopiowanie, archiwizowanie, dystrybuowanie lub przekazywanie na jakimkolwiek nośniku elektronicznym lub mechanicznym, w tym kserokopia, jakiegokolwiek części niniejszego podręcznika bez pisemnej zgody FAAC S.p.A.

Wszystkie wymienione nazwy i marki są własnością ich producentów.

Klienci mogą wykonywać kopie wyłącznie na własny użytek.

Niniejszy podręcznik został opublikowany w roku 2020.

© Copyright FAAC S.p.A. del 2020. Todos los derechos están reservados.

No puede reproducirse, archivar, distribuirse a terceros ni copiarse de ningún modo, ninguna parte de este manual, con medios mecánicos o mediante fotocopia, sin el permiso previo por escrito de FAAC S.p.A.

Todos los nombres y las marcas citadas son de propiedad de los respectivos fabricantes.

Los clientes pueden realizar copias para su uso exclusivo.

Este manual se ha publicado en 2020.

© Copyright FAAC S.p.A. from 2020. All rights reserved.

No part of this manual may be reproduced, archived, distributed to third parties nor copied in any other way, in any format and with any means, be it electronic, mechanical or by photocopying, without prior written authorisation by FAAC S.p.A.

All names and trademarks mentioned are the property of their respective manufacturers.

Customers may make copies exclusively for their own use.

This manual was published in 2020.

© Copyright FAAC S.p.A. ab dem 2020. Alle Rechte vorbehalten.

Kein Teil dieses Handbuchs darf reproduziert, gespeichert, an Dritte weitergegeben oder sonst auf eine beliebige Art in einem beliebigen Format und mit beliebigen Mitteln kopiert werden, weder mit elektronischen, noch mechanischen oder durch Fotokopieren, ohne die Genehmigung von FAAC S.p.A. Alle erwähnten Namen und Marken sind Eigentum der jeweiligen Hersteller.

Die Kunden dürfen nur für den Eigengebrauch Kopien anfertigen.

Dieses Handbuch wurde 2020 veröffentlicht.

© Copyright FAAC S.p.A. van 2020. Alle rechten voorbehouden.

Niets uit deze handleiding mag gereproduceerd, gearchieveerd, aan derden openbaar gemaakt of op andere wijze gekopieerd worden, in om het even welke vorm en met geen enkel middel, noch elektronisch, mechanisch of via fotokopiëren, zonder schriftelijke toestemming vooraf van FAAC S.p.A.

Alle vermelde namen en merken zijn eigendom van de respectievelijke fabrikanten.

De klanten mogen kopieën maken die enkel voor eigen gebruik bestemd zijn.

Dez handleiding werd in 2020 gepubliceerd.

© Copyright FAAC S.p.A. från 2020. Alla rättigheter förbehålls.

Ingen del av denna manual får kopieras, arkiveras, spridas till tredje part eller på annat sätt kopieras i något format eller med några medel, vare sig elektroniskt, mekaniskt eller via fotokopia, utan föregående skriftligt godkännande från FAAC S.p.A. Samtliga nämnda namn och varumärken tillhör respektive tillverkare.

Kunder får göra kopior endast för eget bruk.

Denna bruksanvisning publicerades 2020.

1. INTRODUCTION TO THE INSTRUCTION MANUAL

This manual provides the correct procedures and requirements for installing the XWBL and maintaining it in a safe condition.

When drafting the manual, the results of the risk assessment conducted by FAAC S.p.A. on the entire product life cycle have been taken into account in order to implement effective risk reduction measures.

The following stages of the life cycle of the product have been considered:

- Delivery/handling
- Assembly and installation
- Set-up and commissioning
- Operation
- Maintenance/troubleshooting
- Disposal at the end of the product's life cycle

Risks arising from installation and using the product have been taken into consideration; these include:

- Risks for the installation/maintenance technician (technical personnel)
- Risks for the user of the automation
- Risks to product integrity (damage)

In Europe, the automation of a gate falls under the Machinery Directive 2006/42/EC and the corresponding harmonised standards. Anyone automating a gate (new or existing) is classified as the Manufacturer of the Machine. They are therefore required by law, among other things, to carry out a risk assessment of the machine (automatic gate in its entirety) and adopt protective measures to fulfil the essential safety requirements specified in Annex I of the Machinery Directive.

FAAC S.p.A. recommends that you always comply with standard EN 12453 (gates) or EN 16005:2012 (automatic doors) and in particular, that you adopt the safety criteria and devices indicated, without exception, including the hold-to-run function.

This manual also contains general information and guidelines, which are purely illustrative and not exhaustive, in order to facilitate the activities carried out by the Manufacturer of the Machine in all respects with regard to carrying out the risk analysis and drafting the instructions for use and maintenance of the machine. It should be clearly understood that FAAC S.p.A. accepts no liability for the reliability and/or completeness of the above instructions. As such, the manufacturer of the machine must carry out all the activities required by the Machinery Directive and the corresponding harmonised standards on the basis of the actual condition of the locations and structures where the product XWBL will be installed, prior to commissioning the machine. These activities include the analysis of all the risks associated with the machine and subsequent implementation of all safety measures intended to fulfil the essential safety requirements.

This manual contains references to European standards. The automation must be installed in compliance with any laws, standards and regulations applicable in the country where the installation takes place.



Unless otherwise specified, the measurements provided in the instructions are in mm.

The manufacturer, FAAC S.p.A. Soc. Unipersonale, hereby, declares that the FAAC model XWBL radio equipment is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following Internet address: <http://www.faac.biz/certificates>

INTENDED USE

XWBL is a device designed to use a WiFi or Ethernet network to provide smart communication between enabled FAAC control boards, users and the dedicated "Simply Connect" cloud platform.

The Simply Connect PRO App is restricted to installers who can remotely control, monitor and modify parameters or set-up an automation without having to access the automation control board. The Simply Connect App is for end users and allows them to control the automation remotely.

LIMITATIONS OF USE

Install indoors. If installed outdoors, house in an enclosure that has a minimum IPX4 protection rating. XWBL can only be installed on FAAC boards fitted with a special connector. The firmware, which can be downloaded from the website <https://pro.faacsimplyconnect.com>, should be updated to the latest version during installation.

The Simply Connect PRO app is available for Android, iOS or a web interface.

UNAUTHORISED USE

Uses other than the intended use are prohibited. Do not allow the control devices to be used by anyone who is not specifically authorised and trained to do so. Do not allow the control devices to be used by children or persons with mental and physical deficiencies unless they are supervised by an adult who is responsible for their safety.

TECHNICAL DATA

Power supply voltage:	5 V $\pm$ from the control board
Power consumption	100 mA at 24 V $\pm$ (500 mA at 5 V $\pm$)
Ambient operating temperature	-20 °C to +55 °C
WiFi	802.11 b/g/n – 2.4GHz
Bluetooth	Bluetooth Low Energy (BLE 4.2) – 2.4GHz
Ethernet	LAN RJ45 - IEEE 802.3 connector

MEANING OF THE SYMBOLS USED

1 Symbols: notes and warnings on the instructions



WARNING ELECTRIC SHOCK HAZARD - The operation or step described must be carried out following the instructions provided and according to the safety regulations.



WARNING, personal injury hazard or risk of damage to components - The operation or step described must be carried out following the instructions provided and according to the safety regulations.



WARNING - Details and specifications which must be respected in order to ensure that the system operates correctly.



RECYCLING AND DISPOSAL - The materials used in manufacturing, the batteries and any electronic components must not be sent to landfill. They must be taken to authorised recycling and disposal centres.



FIGURE E.g.  1-3 see Figure 1 - item 3.



LED off



LED on



LED flashing




LED flashing quickly



LED off briefly

2. PACKAGE CONTENTS

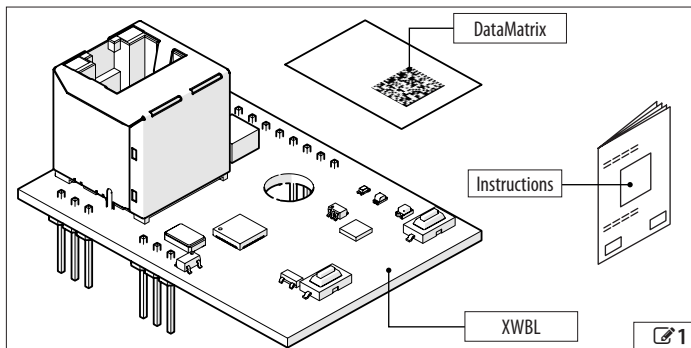


The DataMatrix is the code of the XWBL device included in the package. It DOES NOT work with other XWBL devices. It is necessary when the device is first started for registering the XWBL device and the terminal (smartphone or tablet) used by the installer on the Cloud platform. It will also be required if the XWBL device, the installer's or end users' terminal has to be replaced.



IMPORTANT When installation is complete, give the DataMatrix to the end user, who should keep it in a safe place away from the automation.

3. BOARD LAYOUT

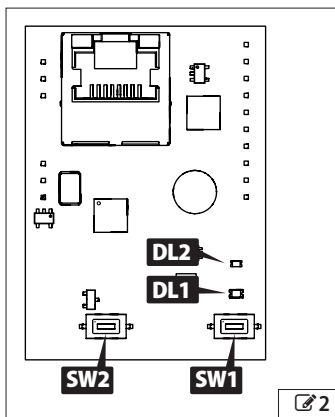


2 COMPONENTS

	RESET button
SW1	(restarts the XWBL without having to restart the control board)
SW2	Not used
DL1 (blue)	4.8 V  on
DL2 (green)	Cloud Communication Status

4. INSTALLATION



Switch off power to the automation before installing the XWBL on the control board. Turn power back on only after you have finished installing the device.

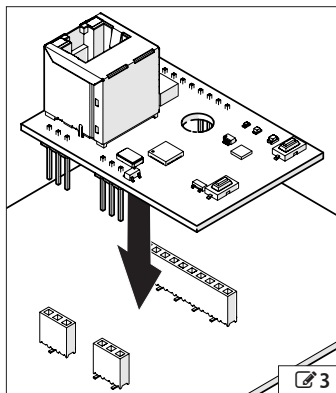

1. Insert the XWBL into the special connector on the control board  3
2. Switch power on to the system and check the status of the LEDs.



The lines in bold indicate the status of the LEDs when it is first switched on

Led DL1 (Blue) - Power

- Power on
- No power

Led DL2 (Green) - Cloud Communication Status

- Communication channel on control board not configured
- * (2s.) XWBL activated on the control board
- * XWBL connected to the network, IP assigned
- XWBL connected to the Cloud platform
- ** (2s.) XWBL connected to the control board, connected to Bluetooth
- * XWBL connected to the network, IP assigned, connected to Bluetooth
- (🌀 2s.) XWBL connected to the Cloud platform, connected to Bluetooth

3. Configure the communication channel on the control board (parameter $\overline{\text{I}}$), refer to the board instructions.

4.1 NETWORK CONFIGURATION

The XWBL uses a specific port for communicating with the Cloud platform. Configure the modem / router used by the XWBL for communicating with the Cloud platform as follows (refer to the device instructions for the procedure):

Communication port	1883
Protocol	TCP
Host (optional)	http://eu-mqtt-prod.faacsimplyconnect.com/

4.2 COMPLETING THE INSTALLATION

Install the Simply Connect PRO app that can be downloaded from the Google Play Store or from the Apple App Store.



Simply Connect PRO requires Android version 7.0 or later, and version 12.0 or later for iOS



FAAC S.p.A. Soc. Unipersonale
Via Calari, 10 - 40069 Zola Predosa BOLOGNA - ITALY
Tel. +39 051 61724 - Fax +39 051 09 57 820
www.faac.it - www.faacgroup.com

