


Operating Instructions

Barrier

MHTM™ MicroDrive

Access XL2 and XXL

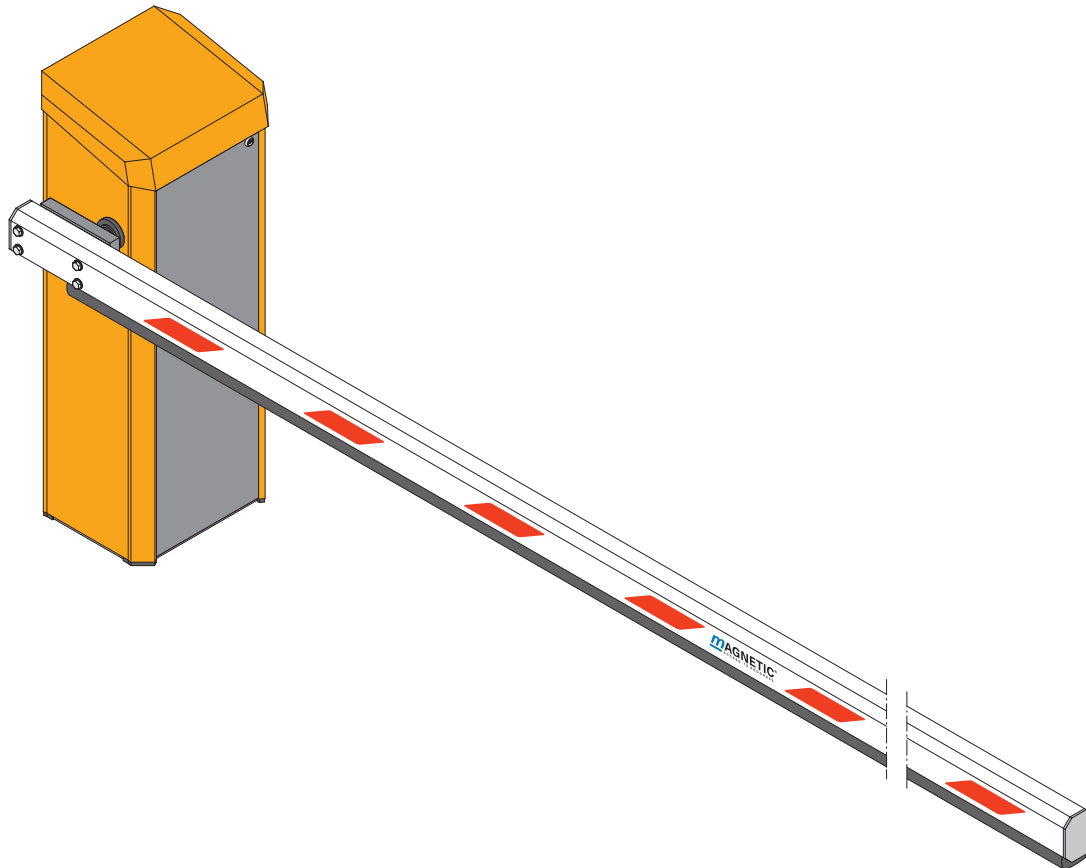

Translation of the Original Operating Instructions

MAGNETIC AUTOCONTROL GMBH

Grienmatt 20
79650 Schopfheim
Germany

Telephone +49 7622 695 5
Fax +49 7622 695 802
info@magnetic-germany.com
www.magnetic-access.com

Contents

1	General	7
1.1	Information regarding the operating instructions	7
1.2	Pictogram explanation	8
1.3	Limitation of liability.....	9
1.4	Copyright protection.....	9
1.5	Scope of delivery	10
1.6	Warranty	10
1.7	Customer service	10
1.8	EU-Declarations of conformity.....	10
1.9	Performance declaration.....	10
1.10	Environmental protection	11
2	Safety	12
2.1	Intended use of the barriers.....	12
2.1.1	Intended use for certain road vehicles	12
2.1.2	Barrier, pedestrian traffic impossible	12
2.1.3	Barrier, pedestrian traffic not impossible.....	13
2.1.4	Non-intended use	13
2.2	Operator's responsibility	14
2.3	Changes and modifications	14
2.4	Specialists and operating personnel.....	15
2.4.1	Requirements	15
2.5	Personal protective equipment	16
2.6	Occupational safety and special dangers	16
2.6.1	Danger symbols on the MHTM™ MicroDrive barrier	16
2.6.2	Hazard notes and occupational safety	17
2.7	Danger area	24
3	Identification	25
3.1	Type plate	25
3.2	Type code	26
4	Technical data	27
4.1	Access XL2.....	27
4.1.1	Dimensions and weight	27
4.1.2	Electrical connection	28
4.1.3	Operating conditions	28
4.1.4	Maximum permissible wind load classes EN 12424.....	29
4.1.5	Operating times	29
4.2	Access XXL.....	30
4.2.1	Dimensions and weight	30
4.2.2	Electrical connection	31

Contents

4.2.3	Operating conditions.....	31
4.2.4	Maximum permissible wind load classes EN 12424.....	32
4.2.5	Operating times	32
4.3	Control unit.....	33
4.4	Plug-in module "Detector A–B"	34
4.5	Plug-in module "Radio"	34
5	Design and function.....	35
5.1	Design	35
5.2	Function	36
6	Transport and storage	37
6.1	Safety notes for transport.....	37
6.2	Transport inspection.....	38
6.3	Transport.....	39
6.4	Storage.....	39
7	Design notes for induction loops	40
8	Assembly and installation	45
8.1	Safety	45
8.2	Required steps	46
8.3	Foundation and empty conduits.....	47
8.3.1	Foundation and empty conduits	48
8.3.2	Foundation and empty conduits for nesting post or light barrier post.....	51
8.4	Assembly and installation of induction loops	53
8.4.1	Directions for the assembly and installation of induction loops.....	53
8.4.2	Induction loops.....	55
8.4.3	Testing induction loops.....	55
8.4.4	Installing induction loops in bitumen, asphalt, or concrete	55
8.4.5	Installing induction loops under interlocking stone paving	57
8.5	Unpacking	58
8.6	Open barrier housing	58
8.7	Assemble housing.....	59
8.8	Assemble nesting post or light barrier post.....	61
8.9	Assemble safety light barrier.....	62
8.9.1	Assemble transmitter.....	62
8.9.2	Assemble receiver	63
8.10	Assemble barrier boom	64
8.10.1	Assemble barrier boom up to 6 metres	64
8.10.2	Assemble barrier boom as of 6 metres	67
8.11	Assemble edge protection	72

8.12	Conversion "left version" – "right version"	73
8.12.1	Left and right version	73
8.12.2	Converting barrier boom up to 6 metres	73
8.12.3	Converting barrier boom as of 6 metres.....	77
8.13	Check and set the balancing springs in the lever system.....	81
8.13.1	Check setting of balancing springs	82
8.13.2	Setting balancing springs	84
8.13.3	Overview table balancing springs	86
8.13.4	Equipment plan balancing springs	90
8.14	Align barrier housing and post.....	91
8.15	Set nesting post height	92
8.16	Stick on prohibition signs	93
8.17	Check assembly and installation	93
9	Electrical connection	94
9.1	Safety.....	94
9.2	Installing electrical protective devices	96
9.3	Connecting the power cable	96
9.4	Connect customer's control lines (signalling devices)	98
9.4.1	Connecting safety devices	100
9.4.2	Plausibility check of the safety devices	100
9.4.3	Connecting safety loop.....	101
9.4.4	Connect and test the safety light barriers	102
9.4.5	Connecting emergency opening contacts	103
9.4.6	Digital inputs	103
9.4.7	Digital outputs and output relays	104
9.5	Checking the electrical connection	105
10	Start-up and operation	106
10.1	Safety.....	106
10.2	Commissioning	107
10.3	Switching on and off the barrier.....	108
10.4	Open and close the barrier manually.....	109
10.5	Putting the barrier temporarily out of operation	110
11	Cleaning and maintenance	111
11.1	Safety.....	111
11.2	Cleaning.....	112
11.3	Cleaning from the outside.....	112
11.4	Clean barrier housing from the inside.....	112
11.5	Maintenance schedule.....	113

Contents

12 Malfunctions	115
12.1 Reset the barrier	115
12.2 Closing or opening the barrier boom in case of power failure.....	116
13 Repair	118
13.1 Safety	118
13.2 Spare parts.....	119
13.3 Replacing the barrier boom.....	119
14 Decommissioning, disassembly and disposal	120
15 EU-Declarations of conformity	121
Index.....	123

1 General

1.1 Information regarding the operating instructions

These operating instructions provide crucial information on handling of Magnetic barriers MHTM™ MicroDrive Access XL2 and Access XXL. Pre-requisite for safe working is the observance of all specified safety notes and instructions.

In addition, the local accident prevention regulations valid at the barrier's area of application and general safety regulations have to be complied with.

Carefully read the operating instructions before starting any work! They are a product component and must be kept in direct proximity of the barrier, well accessible to the personnel at all times.

When passing the barrier on to third parties, the operating instructions must also be handed over.

Components from other suppliers may have their own safety regulations and instructions for use. These must also be observed.

Parameterisation of the barrier control unit MGC and MGC Pro



NOTE!

For parameterisation of the control units MGC and MGC Pro and malfunctions, see separate document "Description of control units MGC and MGC Pro for MHTM™ MicroDrive barriers (Doc-ID: 5816,0006)".


General


1.2 Pictogram explanation


Warning notes


Warning notes are characterised by pictograms in these operating instructions. The warning notes are followed by signal words expressing the scale of the hazard.

It is absolutely essential to observe the notes and to proceed with caution in order to prevent accidents as well as bodily injuries and property damage.

⚠ DANGER	
	The signal word DANGER points to an immediately dangerous situation, which leads to death or severe injuries if it is not avoided.

⚠ WARNING	
	The signal word WARNING points to a potentially dangerous situation, which can lead to death or severe injuries if it is not avoided.

⚠ CAUTION	
	The signal word CAUTION points to a potentially dangerous situation, which can lead to minor injuries if it is not avoided.

NOTICE	
	The signal word NOTICE points to a potentially harmful situation, which can lead to property damage if it is not avoided.

Hints and recommendations



NOTE!

...highlights useful hints and recommendations as well as information for an efficient and trouble-free operation.

1.3 Limitation of liability

All specifications and notes in these operating instructions were compiled with consideration to the valid standards and regulations, the state of the art as well as to our long-standing knowledge and experience.

The manufacturer is not liable for damages caused by:

- Non-observance of the operating instructions
- Improper use
- Deployment of non-trained personnel
- Arbitrary modifications
- Technical changes
- Use of non-approved spare and wear parts.

The actual scope of supply may differ from the explanations and illustrations described in this manual in case of special designs, if additional order options are made use of, or due to latest technical changes.

1.4 Copyright protection

Surrendering the operating instructions to third parties without written permission of the manufacturer is not permitted.



NOTE!

Content details, texts, drawings, pictures and other illustrations are protected by copyright and are subject to industrial property rights. Any improper use shall be liable to prosecution.

Any type and form of duplication – also of extracts – as well as the exploitation and/or communication of the contents are not permitted without the manufacturer's written declaration of consent.

General

1.5 Scope of delivery

The scope of delivery comprises:

- 1 barrier housing
incl. drive unit and control
- 1 Barrier boom
- 1 Boom attachment set
- 2 Mounting profiles
- 2 Prohibition sign stickers
- Edge protection
- Options if applicable
- Documentation per barrier:

1.6 Warranty

Subject to the condition that the operating instructions are observed, and that no inadmissible operations are carried out on the technical equipment, and that the installation has suffered no mechanical damage, Magnetic grants a warranty on all mechanical and electrical components of product to the extent as stated in its standard terms of sales and delivery or as contractually agreed in writing.

1.7 Customer service

Your vendor is available to you for technical information

For the address, see invoice, delivery note or the reverse of these instructions.



NOTE!

In order to enable fast handling note the data of the type plate such as type code, serial number, etc. before calling.


1.8 EU-Declarations of conformity

EU-Declarations of conformity (pursuant to Machinery Directive 2006/42/EC, Annex II) see page 121.

1.9 Performance declaration

For the performance declaration according to building product regulation no. 305/2011, see enclosed data carriers.

1.10 Environmental protection

NOTICE	
	<p>Danger for the environment by improper disposal of components or the barrier!</p> <p>In case of improper disposal of components or the barrier, damage to the environment may result.</p> <ul style="list-style-type: none">– Observe the local and national laws and directives.– Disassemble barrier according to resources. Sort resources and supply them to recycling.

2 Safety

2.1 Intended use of the barriers

The Magnetic MHTM™ MicroDrive barriers are exclusively intended for controlling access to and exit of certain road vehicles in or from certain areas.

The barrier is either controlled by a person in manual operating modes or by access control systems in automatic operating modes and monitored by induction loops and/or safety light barriers.

Electrical energy is used exclusively for operating the barrier. The barrier boom weight is balanced out by spring energy.

The barrier consists of a barrier housing with drive system and control, as well as the barrier boom.

2.1.1 Intended use for certain road vehicles

Certain road vehicles according to chapter 2.1 paragraph 1 need to have sufficiently large metal areas in the vehicle floor area to enable detection by induction loops.

Other or complementary safety facilities must be provided for road vehicles that cannot be detected by induction loops due to the metal area in the vehicle floor area being too small.

Additional safety installations must be provided for motorcycles. For this case such contact the Magnetic Service.

2.1.2 Barrier, pedestrian traffic impossible

In vehicle barriers where personal traffic is excluded and use by pedestrians is not intended.

The presence of persons and animals must be excluded by the operator. This shall apply for the following barrier type:

- Access XL2 with barrier booms up to 6.5 m blocking width and fast speed

The opening and closing speed is set via the parameter "Speed".

→ See separate document "Description of control units MGC and MGC Pro for MHTM™ MicroDrive barriers".

2.1.3 Barrier, pedestrian traffic not impossible

In vehicle barriers where personal traffic cannot be excluded and use by pedestrian traffic is intended.

If persons and animals may be present, only the following barriers may be used in connection with Magnetic safety light barriers.

- Access XL2 with barrier booms up to 6.5 m blocking width and slow and medium speed
- Access XL2 with barrier booms as of 7 m blocking width and fast speed
- Access XXL.

The opening and closing speed is set via the parameter "Speed".

→ See separate document "Description of control units MGC and MGC Pro for MHTM™ MicroDrive barriers".

2.1.4 Non-intended use

Control of pedestrian traffic as contrary to intended use.


The barriers must not be used at railway crossings.

The barriers are not approved for pedestrian traffic, bicycles or animals.

The barriers must not be used in explosive environments.

All uses not described as intended use are prohibited.

No accessories must be connected or installed if they are not specified expressly according to quantity and characteristics and approved by Magnetic Autocontrol.

⚠ WARNING	
	<p>Non-intended use is dangerous!</p> <p>Every non-intended use can lead to dangerous situations.</p> <ul style="list-style-type: none"> – Only use barrier as intended. – All specifications in these operating instructions have to be strictly complied with.

Any types of claims due to damage arising from improper use are excluded. The operator alone shall be responsible for any damage arising from improper use.

2.2 Operator's responsibility

The operator must comply with the statutory obligations regarding work safety.

In addition to the work safety notes in these operating instructions, the safety, accident prevention and environmental provisions applicable for the area the barrier is used in must be complied with.

In particular, the operator must:

- gather information on applicable work protection provisions.
- determine additional dangers in a risk assessment.
- implement the required method of operation of the barrier on site from the operating instructions.
- regularly verify throughout the barrier's time of use that the operating instructions drawn up by him comply with the current state of the regulations.
- adapt the operating instructions to any new provisions, standards and usage conditions - where required.
- clearly determine the responsibilities for installation, operation, maintenance and cleaning of the barrier.
- ensure that all employees that are working at or with the barrier have read and understood the operating instructions.
- Furthermore, the operator must train personnel regarding the use of the barrier at regular intervals and provide information on possible dangers.

Furthermore, the operator is responsible for:

- keeping the barrier in perfect technical order and condition at all times.
- maintaining the barrier according to the maintenance intervals and performing the safety inspections as stipulated.
- checking all protective facilities for completeness and proper function at regular intervals.

The operator is also responsible that the danger area of the barrier boom cannot be accessed by any unauthorised persons, and in particular not by children, under any circumstances.


2.3 Changes and modifications

Changes, modifications and re-builds of the barrier or installation can cause unforeseen danger.

A written authorisation of the manufacturer is required before executing any technical changes and extensions on the barrier.

2.4 Specialists and operating personnel

2.4.1 Requirements

⚠ WARNING	
	<p>Risk of injury in case of improper handling! Improper handling can lead to considerable bodily injuries and property damage.</p> <ul style="list-style-type: none"> – Have any activities only carried out by the individuals designated for that purpose.

The operating instructions specify the following qualification requirements for the different fields of activity:

- **Instructed people**
have been instructed during instructions provided by the operator with regard to the work assigned to them and possible hazards arising from improper conduct.
- **Specialised staff**
are able, due to their technical training, knowledge and experience as well as their knowledge of the pertinent regulations are able to carry out work assigned to them independently and to recognise potential hazards.
- **Electrical specialists**
are able, due to their technical training, knowledge and experiences as well as knowledge of the relevant standards and regulations, to execute tasks on electrical systems and to independently recognise possible hazards.
In Germany, the electrical specialist must comply with the provisions of accident prevention regulation BGV A3 (e.g. master electrical fitter). Appropriate regulations apply in other countries. The regulations valid there must be observed.
- **MHTM™ MicroDrive service experts**
comply with the requirements of the electricians named here. Additionally, these electricians are trained and authorised by Magnetic to perform special repair and service work at MHTM™ MicroDrive barriers.

It must be expected that only those people are deployed who carry out their work reliably. People, whose ability to respond is affected, e.g. by drugs, alcohol or medicines, must not be used. Furthermore, the age and profession-specific regulations valid at the operating location must be observed when selecting personnel.

Safety

2.5 Personal protective equipment

It is necessary to wear personal protective equipment when dealing with the barrier so as to minimise health hazards.

Before carrying out any work, properly dress in the necessary protective equipment such as work clothes, protective gloves, safety shoes, helmet and wear during work.

2.6 Occupational safety and special dangers



The remaining risks resulting from the risk analysis are specified in the following section.

Observe the safety notes listed here and the warning notes mentioned in the other chapters of these instructions to reduce health hazards and to avoid dangerous situations.



2.6.1 Danger symbols on the MHTM™ MicroDrive barrier

The relevant dangerous areas on the barriers can be identified by the following pictograms:


Electric voltage

 DANGER	
	<p>Mortal danger by electric voltage!</p> <p>... indicates life threatening situations caused by electric voltage. Non-observance of the safety instructions causes severe injuries or death. Necessary work may only be carried out by an electrical specialist.</p> <p>This pictogram is fixed on the following component:</p> <ul style="list-style-type: none">– Assembly plate in the barrier housing.

Danger of crushing

 WARNING	
	<p>Danger of crushing!</p> <p>... indicates the presence of components and items moving towards each other. Non-observance of the safety instructions can cause severe injuries.</p> <p>This pictogram is fixed on the following component:</p> <ul style="list-style-type: none">– At the access points for the lever system on the front and rear of the top assembly plate.– At the access point for the flanged shaft on the front and rear of the top assembly plate.


Hot surfaces

⚠ CAUTION	
	<p>Danger of burns!</p> <p>... indicates the presence of a hot surface. Non-observance of the safety instructions can lead to minor injuries.</p> <p>This pictogram is fixed on the following component:</p> <ul style="list-style-type: none"> – Motor in the barrier housing. – Heating (optional) in the barrier housing.

2.6.2 Hazard notes and occupational safety


For your own safety and for the protection of the barrier modules, the following information must be observed and complied with:

Electric voltage


⚠ DANGER	
	<p>Mortal danger by electric voltage!</p> <p>Touching live parts can be lethal.</p> <p>Damage to the insulation or to individual components can be lethal.</p> <ul style="list-style-type: none"> – Switch off the power supply immediately in case of damage to the insulation and arrange repair. – Only electrical specialists may carry out work on the electrical system. – Switch off power supply and secure against reactivation before performing any work. Test for absence of voltage! – Never bypass or deactivate fuses. – When replacing fuses observe the correct amperage specification. – Keep moisture and dust away from live parts. Moisture or dust may cause a short circuit. If the electrical connection is established during precipitation, e.g. rain or snow, penetration of moisture must be prevented by suitable measures, such as a protective cover.

Safety


Electric voltage – missing safety installations

⚠ DANGER	
	<p>Mortal danger by electric voltage!</p> <p>The safety installations that are required according to regional and local regulations must be provided by the customer. Usually these are:</p> <ul style="list-style-type: none">– Residual current device (RCD)– Circuit-breaker– Lockable 2-pole main switch according to EN 60947-3.

Thunderstorm, lightning, electric voltage


⚠ DANGER	
	<p>Mortal danger from lightning and electrical voltage!</p> <p>If lightning strikes the barrier, contact to the barrier components and direct proximity to the barrier includes mortal danger.</p> <ul style="list-style-type: none">– Never install the barrier housing and barrier boom during thunderstorms.– Protect yourself in buildings or vehicles.

Improper operation


⚠ WARNING	
	<p>Danger from improper operation of the barrier!</p> <p>Improper operation of the barrier can cause severe or lethal injuries!</p> <ul style="list-style-type: none">– The barrier closes automatically in certain programme modes. Passing of two vehicles within a single opening process must be prevented by the construction and appropriate signs or signals.– The barrier is intended for a single drive direction at the same time. The operator must prevent concurrent oncoming traffic by suitable measures, such as signs.– Only additions to the barrier housing or boom that are permitted by the manufacturer may be installed.– Keep barrier area free from objects.– Do not use the barrier boom as a lifting device.– Never climb over or crawl under boom.– Never sit on the barrier housing or climb over it.– Do not sit or have yourself lifted by the boom.– Never open or stop the boom manually.

Safety


Entering the danger area of the barrier –
Pedestrian traffic possible

⚠ CAUTION	
	<p>Danger from entering the danger area!</p> <p>The Magnetic MHTM™ MicroDrive barriers are intended exclusively for closing off passages for motor vehicles and trucks. For vehicles that cannot be detected by induction loops, additional safety measures must be provided. If the presence of persons and animals is possible, entering the danger area can cause injuries!</p> <p>Therefore, the operator must take the following measures:</p> <ul style="list-style-type: none">– Observing country-specific laws and regulations.– Marking the danger area by prohibition signs for persons, bicycles, etc.


Entering the danger area of the barrier –
Pedestrian traffic impossible

⚠ WARNING	
	<p>Danger from entering the danger area!</p> <p>The Magnetic MHTM™ MicroDrive barriers are intended exclusively for closing off passages for motor vehicles and trucks. For vehicles that cannot be detected by induction loops, additional safety measures must be provided. Entering the danger area can cause severe or lethal injuries!</p> <p>Therefore, the operator must take the following measures:</p> <ul style="list-style-type: none">– Observing country-specific laws and regulations.– Presence of persons and animals must be excluded.– Marking the danger area by prohibition signs for persons, bicycles, etc.– If required, set up barriers such as fences and railings.– If required, set up separate passageway for persons and bicycles.


Closing boom

⚠ WARNING	
	<p>Danger from closing boom!</p> <p>A closing boom may cause severe or lethal injury to persons, bicyclers, cabriolet drivers and motorcycle drivers!</p> <ul style="list-style-type: none"> – Install safety installations, such as a Magnetic safety light barrier as surveillance device. The surveillance device must prevent the closing of the barrier in case a person or a vehicle is standing below the barrier. – Only use barrier booms approved of by Magnetic. – Assemble edge protection. – If the edge protection was damaged it must be replaced immediately or the barrier must be taken out of operation.

Improper transport

⚠ WARNING	
	<p>Danger from improper transport of the barrier boom and housing!</p> <p>The weight of the barrier boom or housing can severely injure a person!</p> <ul style="list-style-type: none"> – Have them transported by specialists only. – Use lifting gear or forklift with a suitable pallet. – Use suitable lifting gear (loops, etc.) for lifting the barrier boom and barrier housing. The lifting gear must be designed for the respective weights. – Carrying and lifting the barrier boom and housing from the pallet should be done by at least two people.

Heavy weight


⚠ WARNING	
	<p>Risk of injury when lifting heavy objects alone!</p> <p>The weight of heavy objects can severely injure a person!</p> <ul style="list-style-type: none"> – Lifting and carrying the barrier boom and housing from the pallet should be done by a minimum of two people.

Safety


Falling components

⚠ WARNING	
	<p>Risk of injury from falling components!</p> <p>Falling components such as the barrier boom can cause severe injury!</p> <ul style="list-style-type: none"> – Only place the barrier boom horizontally. – Only install the barrier boom when there is no or little wind. – Secure the barrier housing against tilting before assembly. – Install the barrier housing correctly.


Insufficient fixing

⚠ WARNING	
	<p>Risk of injury at insufficient fixing!</p> <p>Insufficient fixing of individual components such as barrier housing, barrier boom and additions permitted by the manufacturer can cause severe injury!</p> <ul style="list-style-type: none"> – Only qualified and skilled personnel are allowed to assemble the barrier and the appropriate components. – Check the foundation anchors fit tightly before starting the barrier. – Check the firm fixing of all screws according to maintenance schedule.

Danger of crushing, lever system and flange shaft

⚠ WARNING	
	<p>Danger of crushing at opened barrier housing at the lever system and flange shaft!</p> <p>The lever system and the flange shaft in the barrier housing can cause serious crushing injuries!</p> <ul style="list-style-type: none"> – Only skilled personnel are allowed work on the barrier housing and barrier boom. – Only work at the barrier housing when the power supply is turned off. – Assemble barrier housing without barrier boom. – For assembly of the barrier boom, strictly observe the descriptions in chapter 8.10. – Wear protective gloves if necessary.

Danger of crushing,
barrier boom and flange

⚠ WARNING	
	<p>Danger of crushing between barrier boom and barrier housing!</p> <p>Moving parts may cause serious crushing injuries!</p> <ul style="list-style-type: none"> – Only skilled personnel are allowed work on the barrier housing and barrier boom. – Only work at the barrier housing when the power supply is turned off. – For assembly of the barrier boom, strictly observe the descriptions in chapter 8.10.


Illegible signage

⚠ CAUTION	
	<p>Risk of injury by illegible symbols!</p> <p>Labels and signs can become dirty or unrecognisable in the course of time.</p> <ul style="list-style-type: none"> – Always keep safety, warning and operating notes in a good readable condition. – Immediately renew damaged or unrecognisable signs or labels.

Safety

2.7 Danger area

Danger of crushing and shearing, barrier boom

⚠ WARNING	
	<p>Danger of crushing and shearing if the safety distance between the barrier boom and other objects is too low!</p> <p>A closing or opening barrier boom can cause severe injuries from crushing if the safety distance to other objects is too low!</p> <ul style="list-style-type: none">– Keep a safety distance of at least 500 mm between the barrier boom and other objects, such as walls, masonry or houses.

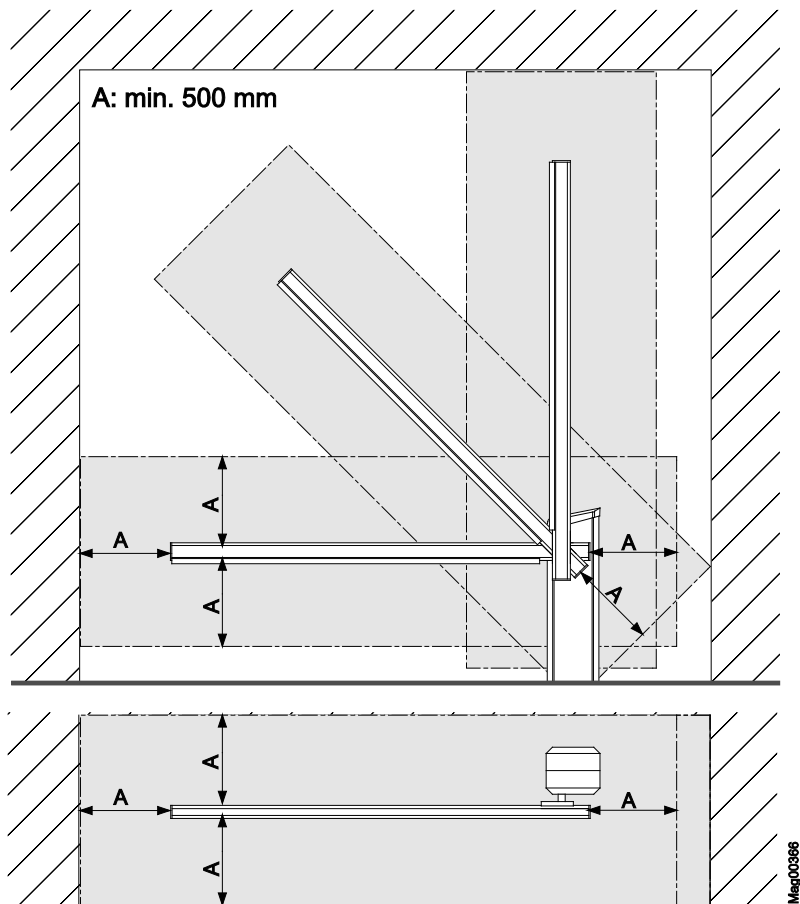


Fig. 1: Danger area

A Danger area of 500 mm

3 Identification

3.1 Type plate

The type plate is provided inside at the barrier housing, next to the hood attachment.

The type plate contains the following information and fields:

- MAGNETIC®** ACCESS TO PROGRESS logo
- MAGNETIC AUTOCONTROL GmbH, D-79650 Schopfheim
- Q logo
- Field 1: Type code
- Field 2: Serien-Nr. (Serial number)
- Field 3: Power supply, Frequency
- Field 4: Current consumption
- Field 5: Power consumption
- Field 6: Operating time (Opening time/closing time)
- Field 7: Protection class
- Field 8: Duty cycle
- Field 9: Wind load classification
- Field 10: EN 13241: Gates – Product standard part 1
- Field 11: Number of performance declaration
- Field 12: Product classification, here "Power operated barrier"
- Field 13: Manufacturing year and month
- Field 14: Bar code for type code
- Field 15: Bar code for serial number
- Made in Germany
- CE mark
- Mag00281b (vertical text on the right)

Fig. 2: Type plate

- 1 Type code
- 2 Serial number
- 3 Power supply, Frequency
- 4 Current consumption
- 5 Power consumption
- 6 Operating time (Opening time/closing time)
- 7 Protection class
- 8 Duty cycle
- 9 Wind load classification
(only for barrier where pedestrian traffic is possible)
- 10 EN 13241: Gates – Product standard part 1
(only for barriers for pedestrian traffic)
- 11 Number of performance declaration
- 12 Product classification,
here "Power operated barrier"
- 13 Manufacturing year and month
- 14 Bar code for type code
- 15 Bar code for serial number

Identification

3.2 Type code

													-	R	A	0	3	0	0	0
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21

Position	Description
1 – 13	Product group: Access XL2 Barrier Access long in Access XXL housing Access XXL Barrier Access extra long
14	–
15	L = Left version R = Right version
16	A = Standard wide range 85 – 264 V AC / 47 – 63 Hz C = UL-version (US market)
17 – 19	Blocking width Standard length: 060 = 6,0 metre 070 = 7,0 metre 085 = 8,5 metre 090 = 9,0 metre (Access XXL only) 100 = 10,0 metre (Access XXL only)
20	Colours 0 = Top cover: RAL 2000 (Orange) Housing: RAL 2000 (Orange) Doors: Similar to RAL 7021 (Black-grey) X = Special coats of paint
21	0

4 Technical data

4.1 Access XL2

4.1.1 Dimensions and weight

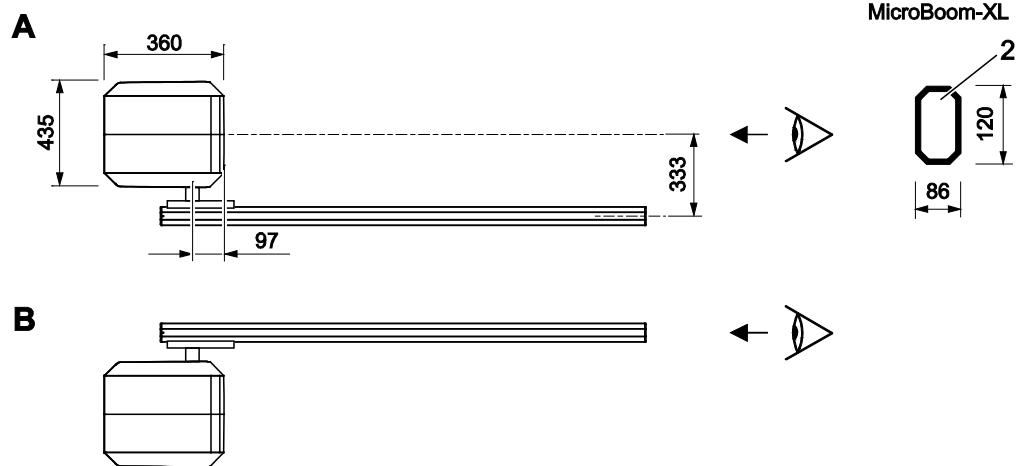
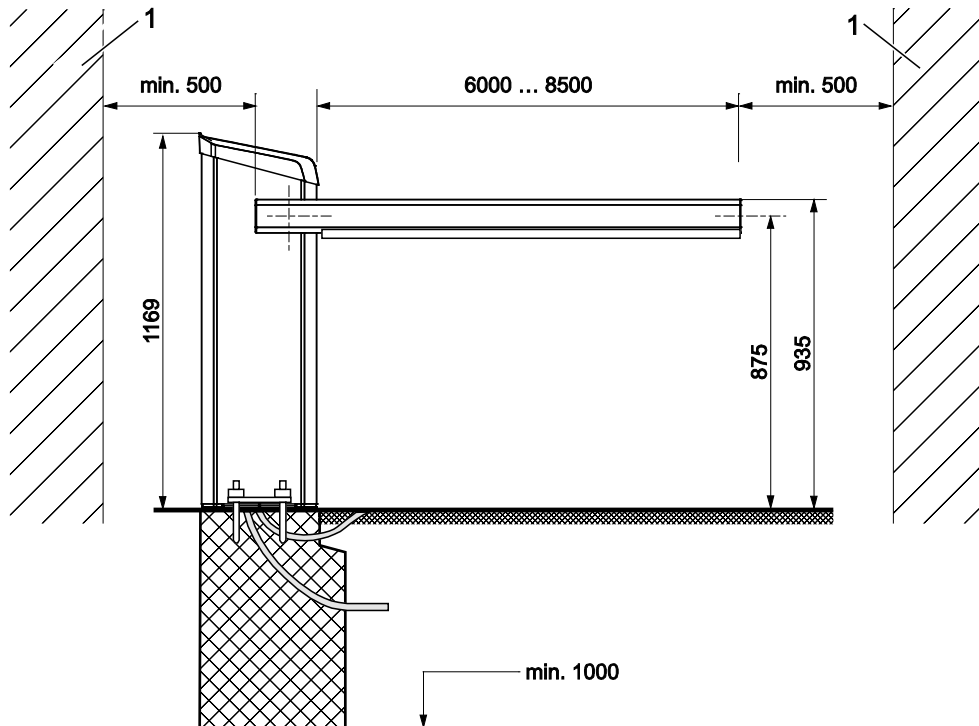


Fig. 3: Dimensions barrier system and barrier boom profile – "Access XL2" series (dimensions in mm)

- 1 Object such as wall, building, etc.
- 2 MicroBoom-XL (barrier boom) with octagon boom profile

- A Barrier, left version
- B Barrier, right version

Technical data

Designation	Unit	Access XL2
Blocking width ¹⁾		6000 to 8500
Barrier housing (width x depth x height)	mm	→ See page 27, Fig. 3. (435 x 360 x 1169)
Barrier housing weight	kg	108

1) Starting at a blocking width of 6 m, a pendulum support or nesting post is required.

Table 1: Dimensions and weight – "Access XL2" series

4.1.2 Electrical connection

Designation	Unit	Access XL2
Supply voltage	V AC	85 to 264
Frequency	Hz	50 / 60
Max. current consumption ¹⁾	A	0.3
Max. power consumption ¹⁾	W	35
Duty cycle	%	100

1) The values refer to power supply of 230 V AC / 50 Hz and without accessories.

Table 2: Electrical connection – "Access XL2" series

4.1.3 Operating conditions

Designation	Unit	Access XL2
Ambient temperature	°C	–30 to +55
Storage temperature	°C	–30 to +70
Relative humidity	%	max. 95 %, non-condensing
Protection class barrier housing	–	IP 54

Table 3: Operational conditions – "Access XL2" series

4.1.4 Maximum permissible wind load classes EN 12424

Designation	Unit	Access XL2 up to 6 m	
		With nesting post	With pendulum support
Max. permissible wind load class EN 12424 ¹⁾	–	4	2
Wind speed ²⁾	km/h	150	97
Wind speed ²⁾	m/s	41	27

Designation	Unit	Access XL2 up to 8.5 m	
		With nesting post	With pendulum support
Max. permissible wind load class EN 12424 ¹⁾	–	3	1
Wind speed ²⁾	km/h	122	80
Wind speed ²⁾	m/s	34	22

1) Applies to maximum blocking widths, no attachments. The classification applies only to closed barriers and does not provide any information on the operating behaviour under wind load. The wind load classes correspond to comparison wind loads in N/m² and are thus purely static values.

2) The indicated wind speeds serve as reference values only. The barriers may be limited to lower wind speeds depending on installation situation or geographical influences.

Table 4: Max. permissible wind load classes EN 12424 – "Access XL2" series

4.1.5 Operating times

Designation	Unit	Access XL2
Opening time/ closing time	s	6

Table 5: Operating times – "Access XL2" series

Technical data

4.2 Access XXL

4.2.1 Dimensions and weight

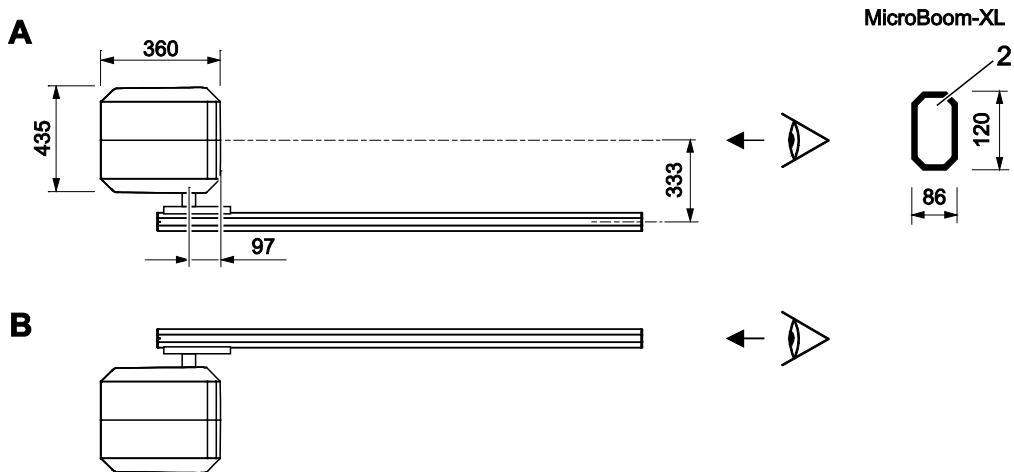
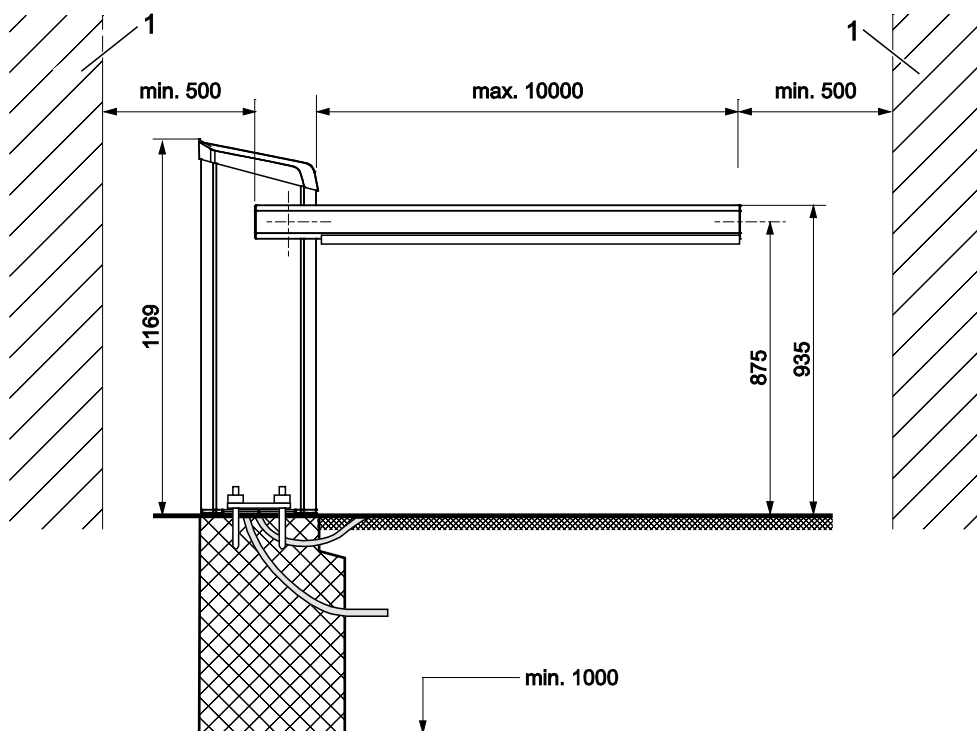


Fig. 4: Dimensions barrier system and barrier boom profile – "Access XXL" series (dimensions in mm)

- 1 Object such as wall, building, etc.
- 2 MicroBoom-XL (barrier boom) with octagon boom profile
- A Barrier, left version
- B Barrier, right version

Mag00333b

Technical data

Designation	Unit	Access XXL
Blocking width ¹⁾		6000 to 10000
Barrier housing (width x depth x height)	mm	→ See page 30, Fig. 4. (435 x 360 x 1169)
Barrier housing weight	kg	112

1) Starting at a blocking width of 6 m, a pendulum support or nesting post is required.

Table 6: Dimensions and weight – "Access XXL" series

4.2.2 Electrical connection

Designation	Unit	Access XXL
Supply voltage	V AC	85 to 264
Frequency	Hz	50 / 60
Max. current consumption ¹⁾	A	0.3
Max. power consumption ¹⁾	W	35
Duty cycle	%	100

1) The values refer to power supply of 230 V AC / 50 Hz and without accessories.

Table 7: Electrical connection – "Access XXL" series

4.2.3 Operating conditions

Designation	Unit	Access XXL
Ambient temperature	°C	–30 to +55
Storage temperature	°C	–30 to +70
Relative humidity	%	max. 95 %, non-condensing
Protection class barrier housing	–	IP 54

Table 8: Operational conditions - "Access XXL" series

Technical data

4.2.4 Maximum permissible wind load classes EN 12424

Designation	Unit	Access XXL up to 10 m	
		With nesting post	With pendulum support
Max. permissible wind load class EN 12424 ¹⁾	–	2	1
Wind speed ²⁾	km/h	97	80
Wind speed ²⁾	m/s	27	22

1) Applies to maximum blocking widths, no attachments. The classification applies only to closed barriers and does not provide any information on the operating behaviour under wind load. The wind load classes correspond to comparison wind loads in N/m² and are thus purely static values.

2) The indicated wind speeds serve as reference values only. The barriers may be limited to lower wind speeds depending on installation situation or geographical influences.

Table 9: Max. permissible wind load classes EN 12424 – "Access XXL" series

4.2.5 Operating times

Designation	Unit	Access XXL
Opening time/ closing time	s	8

Table 10: Operating times – "Access XXL" series

4.3 Control unit

Designation		Unit	MGC (Magnetic Gate Controller)
Supply voltage		V DC	24
Current consumption		—	max. 1 A max. 300 mA + current consumption of the different plug-in modules
Power consumption		—	max 24 W. Max. 7.2 W + power consumption of the different plug-in modules
Control unit safety		—	1 A T
Output clamp X2	Output voltage	V DC	24
	Max. output current	mA	300
Digital inputs	Number	—	8
	Input voltage	V DC	24 ± 10 %
	Input current	—	< 10 mA per input
	Max. line length without overvoltage module ¹⁾	m	30
Digital outputs	Number	—	4 (open collector)
	Switching voltage	V DC	24 ± 10 %
	Max. switching current	mA	100
	Max. line length without overvoltage module ¹⁾	m	30
Output relay	Number	—	3 normally-open contacts and 3 change-over contacts, isolated
	Max. switching voltage	V AC / DC	30
	Switching current	mA	10 mA to 1 A
	Max. line length without overvoltage module ¹⁾	m	30
Display		—	Graphics display, 128 x 65 Pixel
Language display		—	Selectable: German, English, French, Spanish, Italian, Portuguese, Swedish, Finnish, Norwegian, Danish, Estonian, Dutch
Number of slots for plug-in modules		—	5

1) For line lengths exceeding 30 m, overvoltage modules must be installed in front of the terminal clamps.

Table 11: Control unit

Technical data

4.4 Plug-in module "Detector A–B"

Designation	Unit	Plug-in module "Detector A–B"
Current consumption	mA	50
Number of loop detectors	–	2 (A and B)
Inductance range	μH	70 to 500
Number of induction loop sensitivity levels	–	10 levels
Response sensitivity induction loop	%	Selectable: 0.01 to 2.0

Table 12: Plug-in module "Detector A–B"

4.5 Plug-in module "Radio"

Designation	Unit	Plug-in module "Radio"
Current consumption	mA	20
Frequency hand transmitter	MHz	433
HF modulation	–	FM/AM (depending on region)

Table 13: Plug-in module "Radio"

5 Design and function

5.1 Design

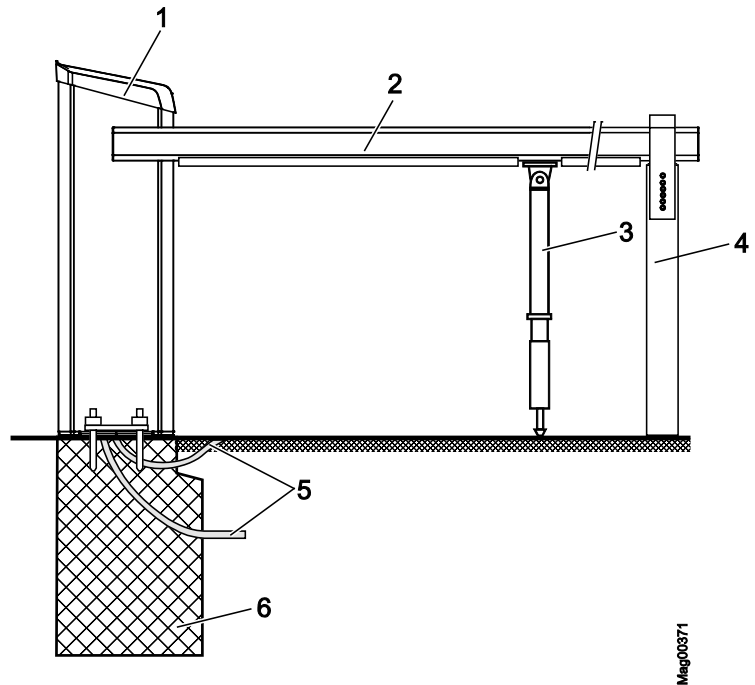


Fig. 5: Barrier system design Series "Access XL2" and "Access XXL"

Starting at a blocking width of 6 m, a pendulum support or nesting post is required.

- 1 Barrier housing
- 2 MicroBoom-XL (barrier boom)
- 3 Pendulum support from 3.5 m barrier boom length (accessory)
- 4 Nesting post (accessory)
- 5 Empty conduits for mains cable, control lines and induction loop
- 6 Concrete foundation with reinforcement

5.2 Function

The barrier consists of a barrier housing with drive system and a barrier boom.

The drive system consists of an electric motor, control unit, and the lever system. The lever system locks the barrier boom in both end positions. In case of power outage, the barrier boom can easily be moved by hand. Integrated balancing springs in the lever system balance out the boom weight exactly. These balancing springs are pre-set in the factory.


Sensors integrated in the motor supply exact data on every correct position of the barrier boom and thus serve the control unit to control the best acceleration and deceleration.

Safety facilities like induction loops or safety light barriers must be installed on site in all cases. The safety installations must ensure that the barrier closes only after the vehicle has passed through. Safety installations, such as induction loops can be purchased from Magnetic. The safety light barriers must be Magnetic ones.


6 Transport and storage

6.1 Safety notes for transport

Improper transport


⚠ WARNING	
	<p>Danger from improper transport of the barrier boom and housing!</p> <p>The weight of the barrier boom or housing can severely injure a person!</p> <ul style="list-style-type: none"> – Have all transport work performed by specialists only. – Use lifting gear or forklift with a suitable pallet. – Use suitable lifting gear (loops, etc.) for lifting the barrier boom and barrier housing. The lifting gear must be designed for the respective weights. – Lifting and carrying the barrier boom and housing from the pallet should be done by a minimum of two people.

Heavy weight

⚠ WARNING	
	<p>Risk of injury when lifting heavy objects alone!</p> <p>The weight of heavy objects can severely injure a person!</p> <ul style="list-style-type: none"> – Lifting and carrying the barrier boom and housing from the pallet should be done by a minimum of two people.

Transport and storage

Improper transport

NOTICE	
	<p>The barrier system can be damaged by improper transport!</p> <p>Substantial material damages can result from improper transport.</p> <ul style="list-style-type: none">– Have all transport work performed by specialists only.– When unloading the packages and during in-plant transportation always proceed with greatest care and caution.– Observe the symbols on the packaging.– Observe the dimensions of the barrier system.– Loading, unloading as well as moving the barrier system must take place with greatest care.– Only remove packaging directly before assembly.

Personal protective equipment

The following must be worn during all transport work:

- Work clothes
- Protective gloves
- Safety shoes
- Protective helmet.

6.2 Transport inspection

Immediately check the delivery after receipt for completeness and transport damages.

Proceed as follows in the case of outwardly recognisable transport damage:

- Do not accept the delivery or only under reserve.
- Note the extent of damage on the transport documents or on the delivery note of the forwarder.
- Lodge complaint.



NOTE!

Lodge a complaint for each defect, as soon as it is recognised. Compensation claims can only be submitted within the valid complaint periods.

6.3 Transport

Barrier housing and barrier boom are delivered separately.

The lifting gear must be designed for the weight of the barrier housing and barrier boom.

For transport barrier modules refer to the safety notes on page 37, chapter 6.1.

For future transports:

- Secure loose cables.
- Secure against vibrations.
- Securely fasten the barrier housing and barrier boom prior to transport (e.g. screw it onto a pallet).
- Transport and put down barrier housing and barrier boom with a forklift and lift with suitable lifting gear.

6.4 Storage

Store the barrier or packages under the following conditions:

- Do not store outdoors.
- Store dry and dust free.
- Do not expose to aggressive media.
- Protect against solar irradiation.
- Avoid mechanical vibrations.
- Storage temperature: -30 to +70 °C
- Relative humidity: max. 95 %, non-condensing
- Check the general condition of all components and packaging regularly, if they are stored for longer periods than 3 months.

Design notes for induction loops

7 Design notes for induction loops

→ For assembly and inspection, see page 53, chapter 8.4.

Please observe following points when dimensioning the induction loops:

- Induction loops respond only to metal. The mass is thereby not important, but the size of the loop's surface, which will be covered by the metal part is.
- The induction loops must not respond to persons or objects with a small metal portion like a bicycle for instance.
- Motorcycles can be detected with appropriately installed induction loops. However, the induction loops are not a sufficient safety installation for motorcycles. Additional safety equipment, such as light barriers, light curtains etc. must be installed.
- Safety loops must secure the danger area underneath the barrier boom throughout the entire length.
- Opening loops must be installed right in front of the safety loop. The maximum distance between safety loop and opening loop must be not greater than max. 1.0 m.

Arrangement of lorry loops

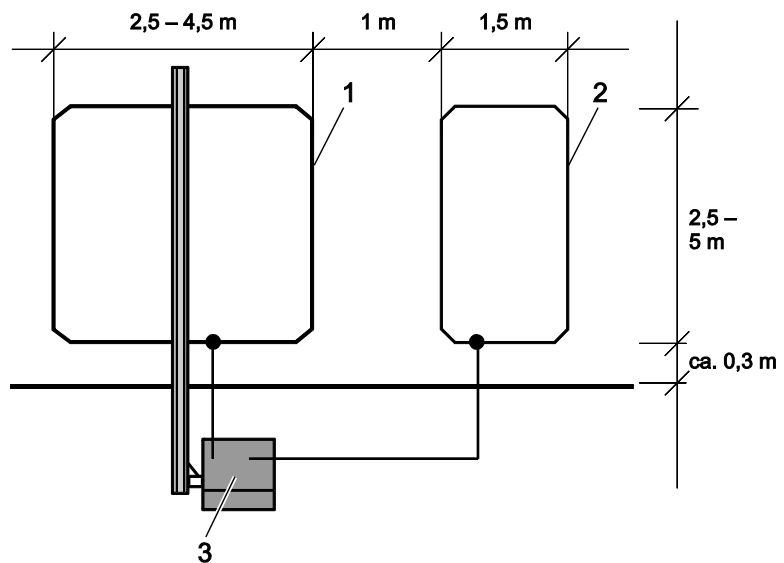


Fig. 6: Lorry loops

- 1 Safety loop
- 2 Opening loop
- 3 Barrier

For lorry passages the safety loop in the direction of travel must be at least 2.5 m long.

Design notes for induction loops

Arrangement of lorry looks at longer barrier booms

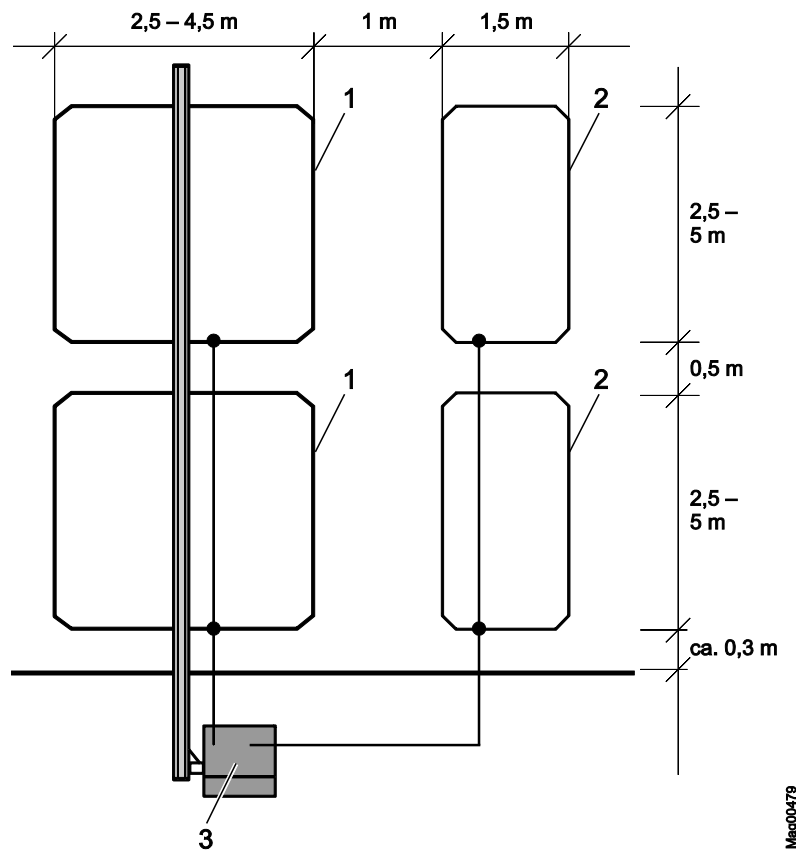


Fig. 7: Lorry looks at longer barrier booms

- 1 Safety loop
- 2 Opening loop
- 3 Barrier

Mag00479

Design notes for induction loops

Arrangement of passenger car loops – passage with long opening loop

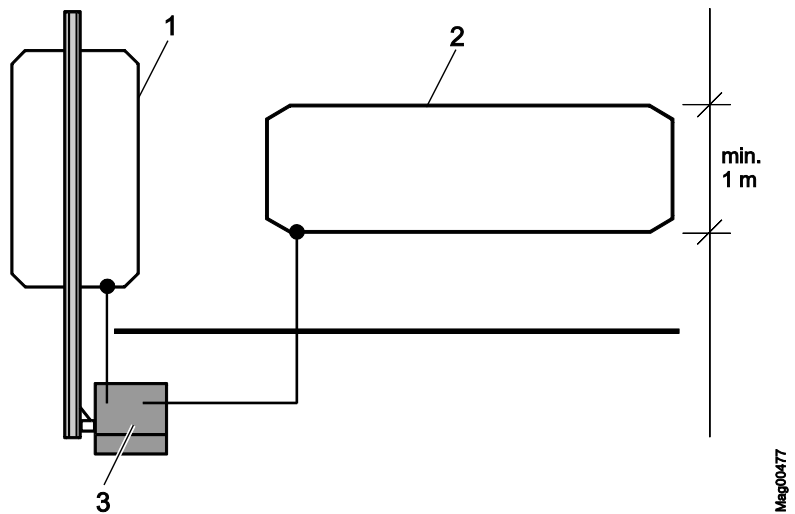


Fig. 8: Passenger car loops – passage with long opening loop

- 1 Safety loop
- 2 Opening loop
- 3 Barrier

Due to a long opening loop vehicles can drive through without needing to stop.

Arrangement of lorry/ passenger car loops

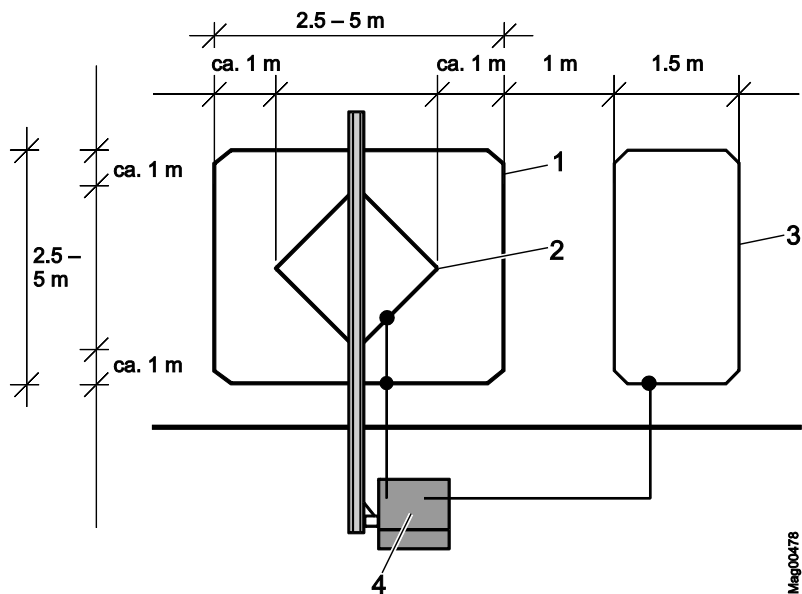


Fig. 9: Lorry/passenger car loops

- 1 Safety loop lorry (inductance "L1")
- 2 Safety loop passenger car (inductance "L2")
- 3 Opening loop lorry and passenger car
- 4 Barrier

Observe overall inductance "L_{total}". For calculation, see page 44.

Design notes for induction loops

Arrangement of lorry/ passenger car loops at longer barrier booms

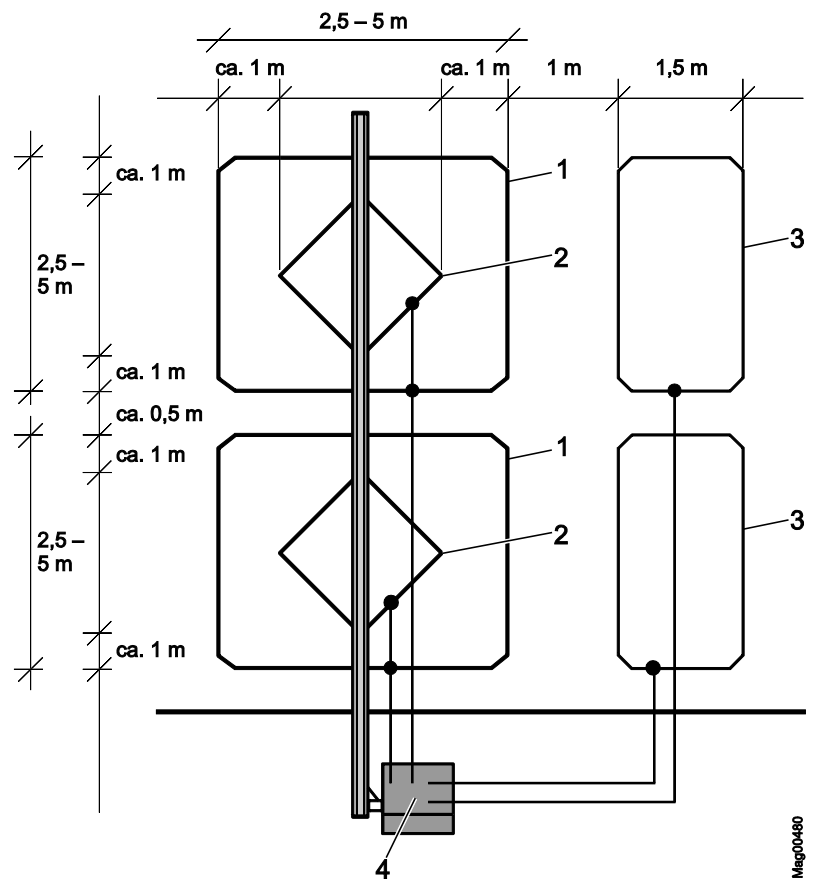


Fig. 10: Lorry/passenger car loops at longer barrier booms

- 1 Safety loop lorry (inductance "L1")
- 2 Safety loop passenger car (inductance "L2")
- 3 Opening loop lorry and passenger car
- 4 Barrier

Observe overall inductance " L_{total} ". For calculation, see page 44.



NOTE!

For this application case, we recommend an additional detector plug-in module to put one loop pair (lorry and car) on one detector each. The complete inductance must not exceed 500 μ H.

Design notes for induction loops

For combined truck/passenger car loops following points must be additionally observed:

- The winding direction of the inner safety loop for passenger cars must be identical to the outer safety loop for trucks. Meaning, the sensitivity in the middle between outer and inner loop is then at its maximum.
- Outer and inner loop must be both connected to one detector channel.
- The overall inductance determines, whether the truck and the passenger car loop have to be implemented as series or as parallel circuit. Always lead both feed lines into the barrier housing. The overall inductance must be between 70 and 500 μH .

Calculation of the overall inductance for series circuits

$$L_{total} = L1 + L2$$

Calculation of the overall inductance for parallel circuits

$$L_{total} = \frac{L1 \cdot L2}{L1 + L2}$$



NOTE!


For special cases such as loops for motorcycles, contact the Magnetic Service.

8 Assembly and installation


8.1 Safety

→ See also safety notes on page 16, chapter 2.6 "Occupational safety and special dangers".

General

⚠ WARNING	
	<p>Danger by inappropriate installation! Inappropriate installation can cause severe injuries!</p> <ul style="list-style-type: none"> – Only specialist personnel or electrical specialists must perform any assembly and installation tasks. – Prior to work, ensure that there is sufficient assembly space. – Pay attention to tidiness and cleanness at the assembly site! Loosely stacked or lying around components and tools are accident sources. – Comply with specifications for foundations and reinforcement. – Ensure correct arrangement and fit on all assemblies and components. – Install the indicated fastening elements correctly.

Danger of crushing and shearing, barrier boom

⚠ WARNING	
	<p>Danger of crushing and shearing if the safety distance between the barrier boom and other objects is too low! A closing or opening barrier boom can cause severe injuries from crushing if the safety distance to other objects is too low!</p> <ul style="list-style-type: none"> – Keep a safety distance of at least 500 mm between the barrier boom and other objects, such as walls, masonry or houses. → See page 24, chapter 2.7. – Assemble and install barrier system according to Fig. 11.

Assembly and installation

Personal protective equipment

The following must be worn during all assembly and installation work:

- Work clothes
- Protective gloves
- Safety shoes
- Protective helmet.

8.2 Required steps

The following steps are to be completed prior to assembly and installation:

- Laying the foundation with reinforcement for the barrier and install empty conduits.
- Set up foundation for nesting post or light barrier post and empty conduits.
- Installing induction loops.

The following procedures have to be observed during assembly and installation:

- Unpack barrier and accessories.
- Mount barrier housing on the foundation.
- Mount nesting post or light barrier post on the foundation.
- Mount safety light barrier.
- Assemble barrier boom (of 6 metres).
- Mount edge protection.
- Mount barrier boom.
- Adjust balancing springs.
- Align barrier housing and nesting post or light barrier post.
- Set nesting post height.
- Assemble and install signalling device.
- Arrange electrical connections.
→ See page 94, chapter 9.

8.3 Foundation and empty conduits

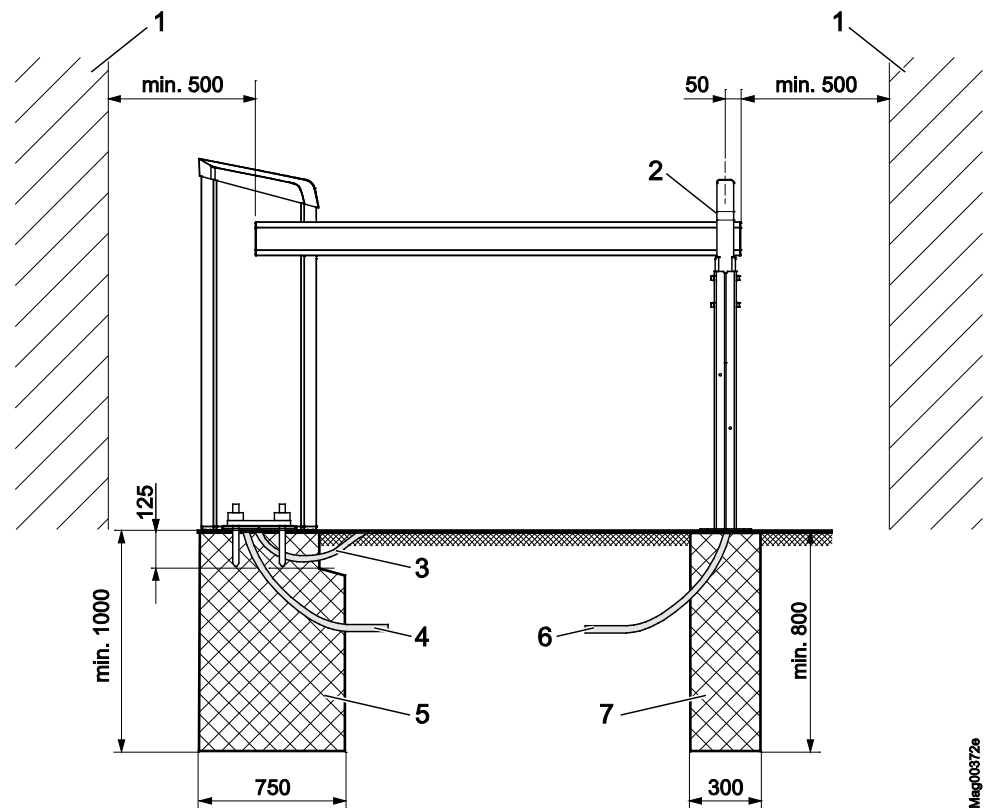


Fig. 11: Assembly boom system (dimensions in mm)

- 1 Object like wall, building, etc.
Keep a safety distance of at least 500 mm between the barrier boom and other objects, such as walls, masonry or houses
- 2 Posts, e.g. nesting posts, place post centre at a distance of 50 mm to the barrier boom tip
- 3 Empty conduit for induction loop connection
- 4 One empty conduit each for mains cable and control lines
- 5 Foundation with reinforcement grid for barrier housing
- 6 Optional: Empty conduit for safety light barriers, connection line receiver
- 7 Optional: Foundation for nesting post or light barrier post, nesting post displayed here
From a blocking width of 6 metres, a pendulum support or nesting post is required.

Meg00372e

Assembly and installation

8.3.1 Foundation and empty conduits

Assembly site

The assembly site must meet the following requirements:

- The barrier must not be put up where there is a danger of flooding.
- Keep a safety distance of at least 500 mm between the barrier boom and other objects, such as walls, masonry or houses.
→ See page 47, Fig. 11.

Foundation and reinforcement

The foundation must meet the following requirements:

→ See page 47, Fig. 11 and page 49, Fig. 12.

- have sufficient load-carrying capacity.
(concrete foundations: C35/45 XD3 XF2)
- Water cement value: 0.5
- Foundation depth: at least 1000 mm, frost-protected foundation depth to be adjusted to the local situation.
- Foundation section: 750 mm x 750 mm
- Reinforcing grid as shown in figure Fig. 13

Empty conduits

The empty conduits must meet the following requirements:

→ See page 49, Fig. 12

- Separate empty conduits for mains cable and control lines.
Diameter: 29 mm each
- Optional empty conduit for induction loop.
Diameter: 29 mm each
- Conduits have to be planned to a sufficient length.



NOTE!

To provide a trouble-free operation use separate conduits for control lines and mains cable.

Assembly and installation

1. Dig foundation hole pursuant to Fig. 11 and Fig. 12.

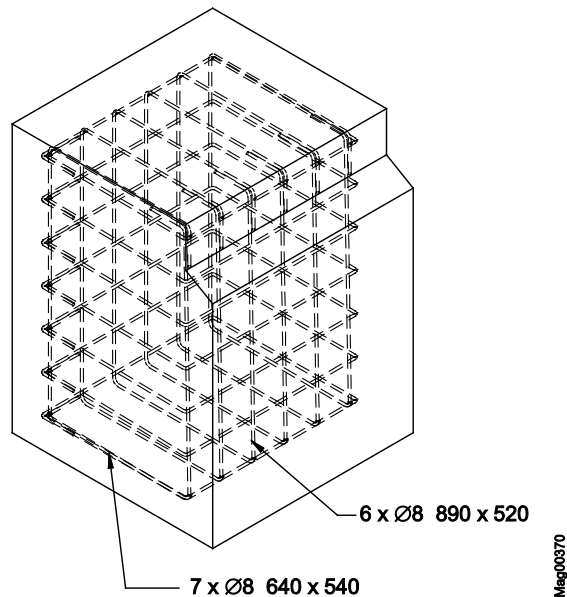


Fig. 13: Reinforcement grid Access XL2 and Access XXL
(dimensions in mm)

2. Place reinforcement grid pursuant to Fig. 13 in the foundation hole.
3. Place empty conduits pursuant to Fig. 12 in the foundation hole.
4. Close empty conduits to prevent water from entering.
5. Fill concrete foundation pursuant to Fig. 12.
6. Create flat line in the base area. The following requirements must be fulfilled:
 - Level and horizontal.
 - Surface deviation: max. 2 mm/m²
7. Let concrete cure.
8. Apply moisture protection agent to concrete surface.




NOTE!

We recommend applying moisture protection either in the form of sealing sludge such as 1100 Hansit or ready-made solution such as Sikagard® 703 W or deepry® to the concrete surface before housing assembly. Moisture protection prevents entering of moisture into the housing from the concrete floor.

8.3.2 Foundation and empty conduits for nesting post or light barrier post

Danger of crushing

⚠ CAUTION	
	<p>Crushing danger between the fork at the nesting post and the barrier boom!</p> <p>Fingers and hands can be crushed when the barrier boom runs into the nesting post when closing.</p> <ul style="list-style-type: none"> – Switch off power supply during assembly. – Do not hold on to fork from the inside. Wear safety gloves if required.

Dimensions

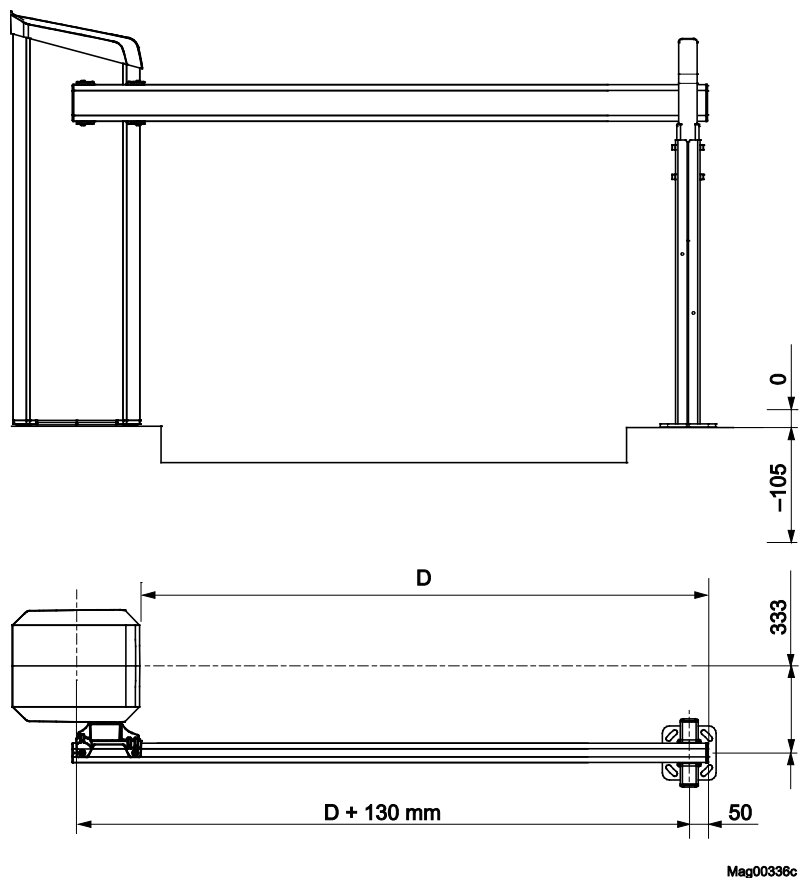


Fig. 14: Dimensions barrier housing – post (dimensions in mm)

Assembly site

- The nesting post and light barrier post must not be put up where there is a danger of flooding.
- Place post centre at a distance of 50 mm from the barrier boom tip. → See page 51, Fig. 14.

Assembly and installation

Foundation

The foundation must meet the following requirements:

→ See page 47, Fig. 11 and page 52, Fig. 15.

- Have sufficient load-carrying capacity.
(concrete foundations: C35/45 XD3 XF2)
- Water cement value: 0.5
- Foundation depth: at least 800 mm, frost-protected
foundation depth to be adjusted to the local situation.
- Foundation section: 300 mm x 300 mm

Empty conduit

If the barrier system is equipped with a light barrier, an empty conduit must be installed for the transmitter connection line. Conduits have to be planned to a sufficient length.

Laying the foundation, Installing empty conduits

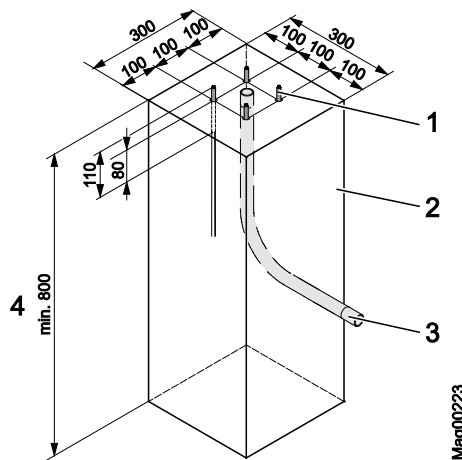


Fig. 15: Foundation plan for nesting post and light barrier post (dimensions in mm)

- 1 Foundation anchor (4 pcs.)
 - 2 Concrete foundations (C35/45 XD3 XF2)
 - 3 Optional for light barriers:
Empty conduit for transmitter connection line
 - 4 Foundation depth: at least 800 mm, frost-protected
foundation depth to be adjusted to the local situation.
1. Dig foundation hole pursuant to Fig. 11 and Fig. 15.
 2. Place empty conduit pursuant to Fig. 15 in the foundation hole.
 3. Close empty conduit to prevent water from entering.
 4. Fill concrete foundation pursuant to Fig. 15.
 5. Create flat line in the base area. The following requirements must be fulfilled:
 - Level and horizontal.
 - Surface deviation: max. 2 mm/m²
 6. Let concrete cure.

8.4 Assembly and installation of induction loops

Depending on the application safety installations must be installed on site. Induction loops, light barriers, etc. can be used as safety installations.

The safety installations must ensure that the barrier closes only after the vehicle has passed through. Safety installations, such as induction loops can be purchased from Magnetic.

8.4.1 Directions for the assembly and installation of induction loops

On barriers with an automatic closing function induction loops are used for the detection of vehicles. The loop underneath the barrier boom always serves as monitor and closing loop. Meaning, as long as a vehicle is standing on the loop, the barrier stays open. Only after the vehicle has left the loop will the barrier be closed.

Example

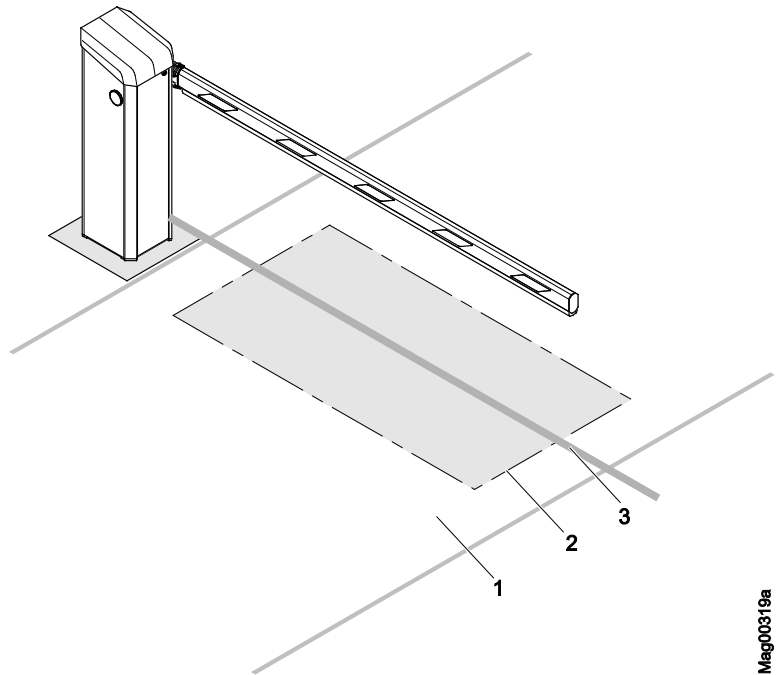


Fig. 16: Arrangement example of an induction loop for passenger car operation

- 1 Carriageway
- 2 Induction loop
- 3 Projection of the barrier boom onto the subsurface with a standard installation of the loop

→ The induction loop setup depends on the application case. For other application cases, see page 40, chapter 7.

Assembly and installation

Please observe following points when installing the induction loop:

Loop geometry and clearances

- Install the loop symmetrically to the barrier boom. Please make sure that the barrier boom is attached to the side of the barrier housing. → Refer from page 27, Fig. 3.
- The clearance of the safety loop for passenger cars in front of, and behind the barrier boom must be at least 500 mm. The safety loop for lorries must be dimensioned larger. → See also page 53, Fig. 16.
- The distance of the induction loop from the roadside should be about 300 to 500 mm.
- Install opening loops right in front of the safety loop. The clearance between opening loop and safety loop must be not greater than 1 m for lorries and passenger cars, and 0.5 m for motorcycles.
- If there are iron reinforcements, ramp heating etc. in the carriageway, the induction loop must have a clearance of at least 50 mm from those. Metals in the proximity of the induction loop affect the response sensitivity.
- Avoid direct contact of induction loops with reinforcement and ramp heating.
- Install induction loops at a distance of at least 1 m from sliding gates, roller grilles etc.

Installation and ground conditions

- Please make sure when moulding or installing that the loop can not move anymore once it is in operation. Any geometric alteration will act as inductance change, which will set the detector to an error state.
- Brittle road surfaces, loose pavements, gravel paths etc. are not suited for the application of induction loops.

Feed line

- The feed line to the loop must not exceed 15 m.
- The loop connection cable must protrude about 1.5 m from the foundation.
- Shorten the feed line to the loop to the proper length. The feed line must by no means be coiled.
- The feed line must be twisted up to right in front of the terminals of the loop detector with approx. 20 twists per metre.

8.4.2 Induction loops

The induction loops are available as ready assembled cables in various lengths from Magnetic.

Alternatively a loop can be manufactured from single wire. The following requirements must be fulfilled:

- Wire cross section: 0.75 to 1.5 mm²
- Inductance of the loop: 70 to 500 µH. This is equivalent to a loop with 3 to 6 windings.
- When using hot pouring compounds, such as bitumen temperature resistant loop cables/strands must be used.

8.4.3 Testing induction loops

To verify the contact resistance, insulation resistance, and inductance of the loop these properties must be measured after installation:

- Contact resistance: 0.8 to 2.0 ohms
- Insulation resistance to earth: > 1 Mohm.
- Inductance of the loop: 70 to 500 µH

If the values are not within the specified ranges, the loop is defective.

8.4.4 Installing induction loops in bitumen, asphalt, or concrete

1. Cut a 50 mm deep groove into the surface or asphalt using a cutting disc. The groove must be equally deep at every point. According to Fig. 17 the corners of the groove must be cut in a 45° angle.

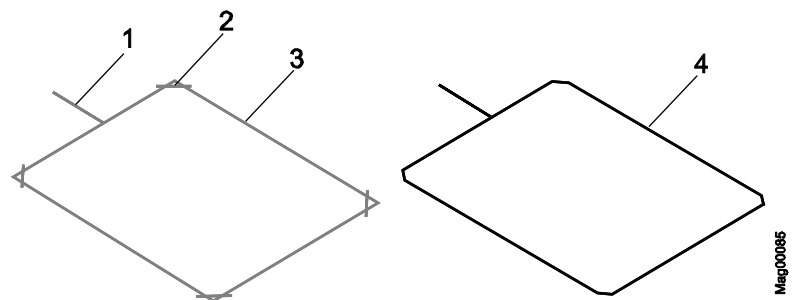


Fig. 17: Installing induction loop in bitumen, asphalt, or concrete

- 1 Groove for induction loop feed line
- 2 Corners cut diagonally
- 3 Groove for induction loop
- 4 Induction loop

Assembly and installation

2. Lay the loop carefully into the groove and push it down by means of a blunt object, such as a piece of wood. The insulation must by no means be damaged.
3. To avoid slipping of the loop, fix the loop using small wooden wedges. Remove the wooden wedges later on.
4. Push the loop feed line through the empty conduit in place into the barrier housing.
5. Measure the induction loop according to chapter 8.4.3.
6. We recommend to cover the inserted loop using quartz sand. Make sure that at least 25 mm remain between the upper edge of the carriageway and the quartz sand for the potting compound.
7. Seal the groove with the potting compound.
 - The temperature resistance of the loop must match the temperature of the potting compound.
8. Allow the potting compound to cure.

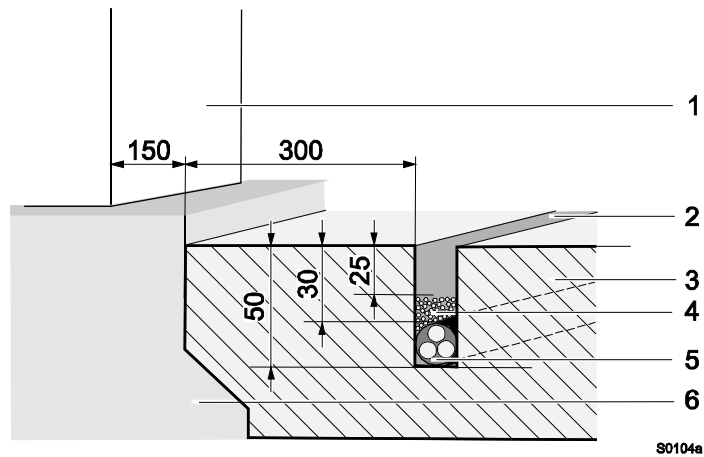
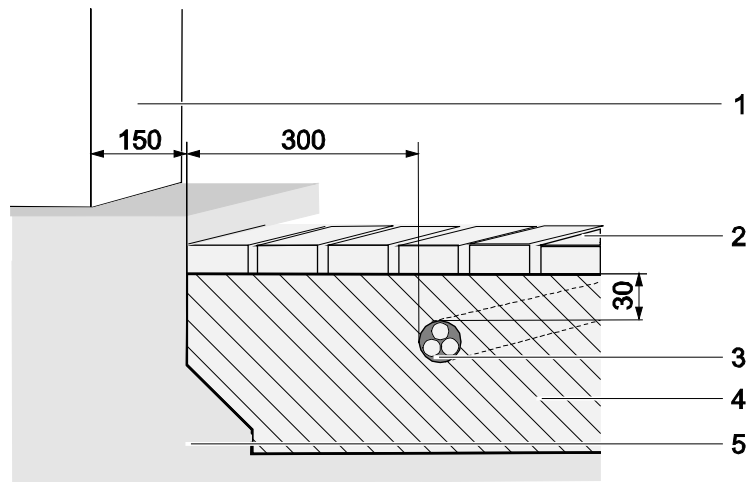


Fig. 18: Installing induction loop in bitumen, asphalt, or concrete (dimensions in mm)

- 1 Barrier housing
- 2 Groove with potting compound
- 3 Asphalt surface
- 4 Quartz sand filling
- 5 Loop cable
- 6 Foundation

8.4.5 Installing induction loops under interlocking stone paving

S0105a

Fig. 19: Installing an induction loop under interlocking stone paving (dimensions in mm)

- 1 Barrier housing
- 2 Paving
- 3 Loop cable
- 4 Sand bed
- 5 Substructure

When installing induction loops under interlocking stone paving, following points must be observed additionally:

- Use only pre-assembled cables provided by Magnetic.
- Install the induction loop in sand only. The induction loop must not be installed in gravel or split.
- The induction loop must not slip or shift or be damaged during later vehicle traffic.
- Keep a minimum clearance between paving and loop cable of approx. 30 mm.

8.5 Unpacking

The individual packages are packed according to the expected transport conditions. Only environment-friendly materials have been used for the packaging.

The packaging should protect the individual components against transport damages, corrosion, etc up to the assembly. Therefore do not destroy the packaging and remove only directly before assembly.

1. Unpack barrier.
2. Set up barrier housing vertically.
3. Lay down barrier boom.
4. Unpack and lay out accessories.
5. Separate material according to type and size and recycle them after use.

8.6 Open barrier housing

Drive system, balancing springs, connection terminals and control are protected with a hood and two doors. In most cases, it is sufficient to remove the hood and the door facing to the road.

Hood and door facing the road

1. Unlock lock at the door facing the road.
2. Lift hood upwards. For this, push the hood back and lift it from the two disconnections.
3. Pull out the door upwards.

Door facing away from the road

4. Loosen and remove the two hexagon screws with hexagon socket.
5. Pull out the door upwards.

After any work

6. Install doors.
7. Attach and lock the hood.

8.7 Assemble housing


The barrier housing is attached by 4 foundation anchors and 2 attachment profiles. The attachment profiles are included in delivery. You can order a mounting set consisting of a foundation anchor, washers, spring rings and hexagon head screws from Magnetic Autocontrol GmbH as accessories.

Requirements mounting material

If you are using your own mounting material, it must meet the following requirements:

- 4 foundation anchors: Fischer reaction anchor with glue cartridge RM 16 and sleeve with inner thread RG18 x 125 M12
- 4 washers DIN 9021 d17, zinc-plated
- 4 washers DIN 9021 d13, zinc-plated
- 4 spring washers DIN 128 A12, zinc-plated
- 4 hexagon head screws DIN 931 M12 x 55 8.8, zinc-plated

Access XL2 and Access XXL – Assemble barrier housing

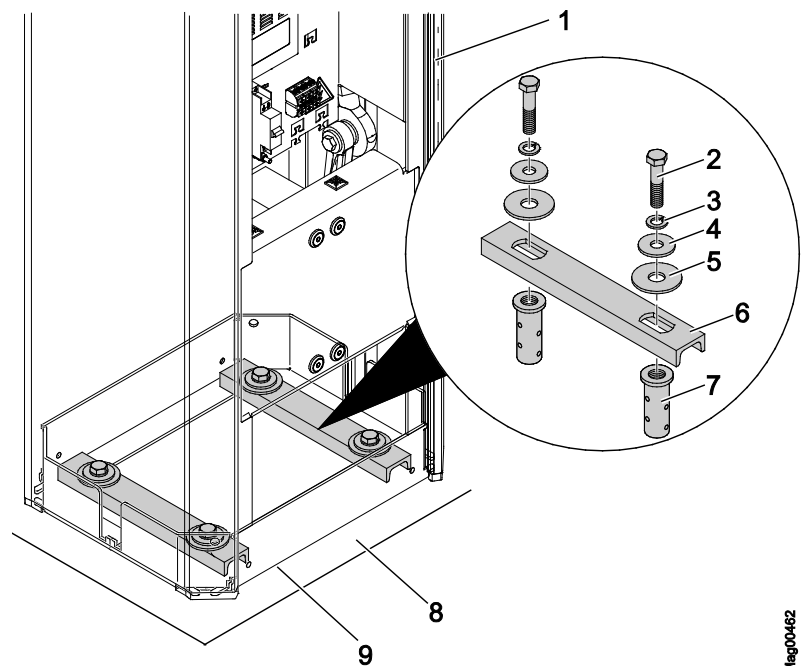

Meg00462

Fig. 20: Assemble barrier housing – Access XL2 and Access XXL

- 1 Barrier housing
- 2 Hexagon head screws
- 3 Spring washer
- 4 Washer d13
- 5 Washer d17
- 6 Mounting profile
- 7 Sleeve with inner thread
- 8 Foundation
- 9 Silicon joint

Assembly and installation

Assemble housing

1. The foundation must have cured.
2. Drill holes for the sleeves with inner threads according to the foundation plan. Compliance with the indicate sizes.
→ Access XL2: See page 49, Fig. 12.
→ Access XXL: See page 49, Fig. 12.
3. Set sleeves with inner thread according to the enclosed instructions.
4. Set up barrier housing upright on foundation.
5. Attach the barrier housing on the foundation. Tighten hexagon head screws slightly for this.
→ Access XL2: See page 59, Fig. 20.
→ Access XXL: See page 59, Fig. 20.
6. Align barrier housing. Tighten the hexagon head screws firmly. If a nesting post or light barrier post is installed, observe page 91, chapter 8.14.
7. Seal barrier housing with silicon joint.

8.8 Assemble nesting post or light barrier post

The nesting post and the light barrier post are attached with 4 foundation anchors each. You can order a mounting set consisting of foundation anchor, washers, spring rings and hexagon nuts from Magnetic Autocontrol GmbH as accessories.

Requirements mounting material

If you are using your own mounting material, it must meet the following requirements:

- 4 foundation anchors:
 - Features: suitable for concrete C35/45 XD3 XF2
 - Material: Stainless steel
 - Size: M8 x 110
 - Tensile strength: at least 9 kN
Foundation anchors that are optionally available from Magnetic achieve the tensile strength of 9 kN at a drilling depth of 80 mm.
- 4 washers DIN 9021 d8,4, stainless steel
- 4 spring washers DIN 128 A8, stainless steel
- 4 hexagon nuts DIN 934 M8, stainless steel

Assemble nesting post or light barrier post

1. The foundation must have cured.
2. Drill holes for the foundation anchors according to the foundation plan, page 52, Fig. 15. In compliance with the indicated sizes.
 - Drill-hole distance: 100 mm, square alignment
 - Diameter: 10 mm
 - Depth: 80 mm
(At this drilling depth, a minimum tensile strength of 9 kN must be guaranteed.)
3. Set four foundation anchors M8 x 110.
4. Set up post upright on foundation.
5. Attach the post to the foundation with the anchor bolts and tighten the nuts securely.

8.9 Assemble safety light barrier

Only Magnetic safety light barriers must be used.

8.9.1 Assemble transmitter

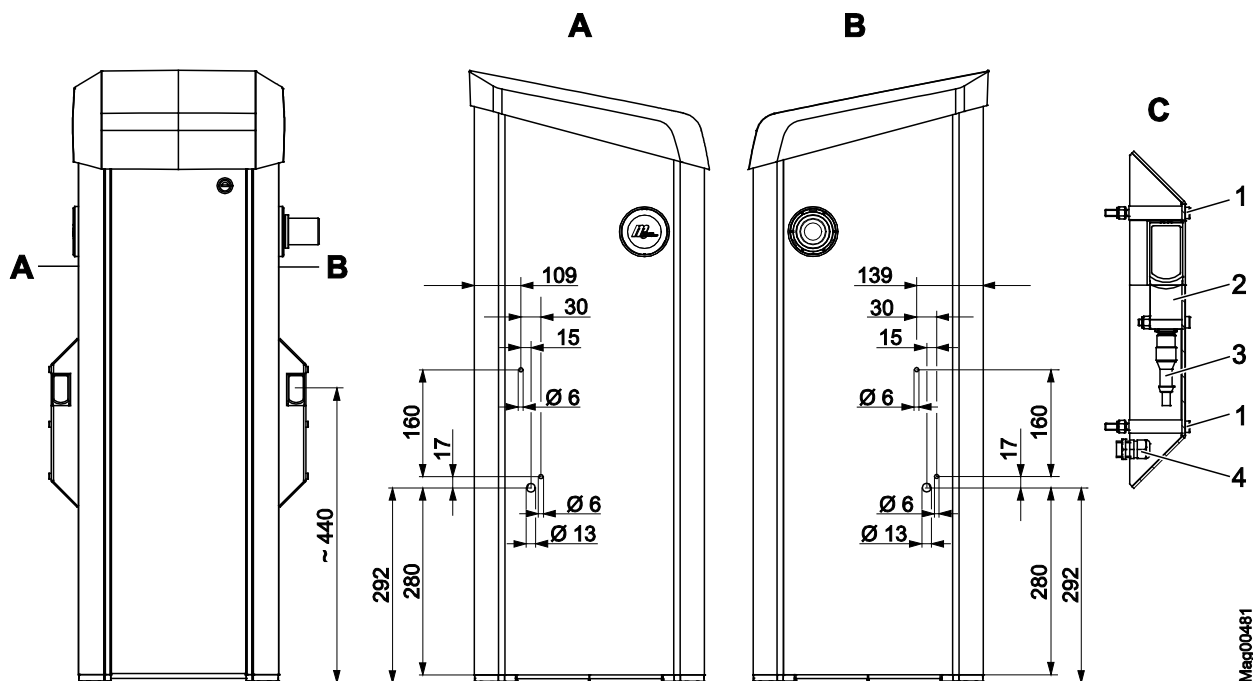
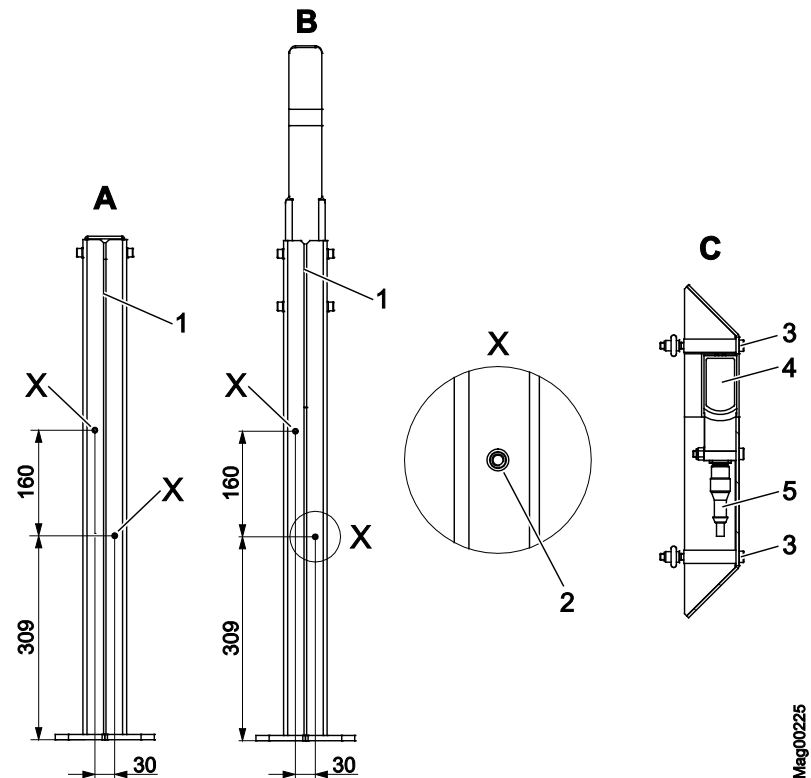


Fig. 21: Assemble of the transmitter's light barrier housing on the barrier housing (dimensions in mm)

- A View A
- B View B
- C Light barrier housing transmitter

- 1 Hexagon socket screws 5 AF
- 2 Transmitter
- 3 Transmitter connection line
- 4 Cable screw connection

1. Drill holes for the light barrier housing according to Fig. 21.
2. Mount the cable screws at the housing with locknuts.
3. Connect connection line for transmitter to the control unit.
4. Guide connection line through cable screws.
5. Mount light barrier housing to housing with the hexagon socket screws 5 AF.

8.9.2 Assemble receiver

Meg00225

Fig. 22: Assemble the receiver's light barrier housing on the post (dimensions in mm)

- A Light barrier post
- B Nesting post
- C Light barrier housing

- 1 Gap
- 2 Drill holes for blind rivet nut
- 3 Hexagon socket screws 5 AF
- 4 Receiver
- 5 Receiver connection line


1. Press the two blind rivet nuts into the two intended bores at the post.
2. Guide the connection line for receiver through the gap in the post.
3. Connect connection line for receiver to the receiver.
4. Mount light barrier housing to housing with the hexagon socket screws 5 AF
5. Close empty conduits with construction foam to prevent water from entering them.

Assembly and installation

8.10 Assemble barrier boom

8.10.1 Assemble barrier boom up to 6 metres

Danger of injury

⚠ CAUTION	
	<p>Danger of injury!</p> <p>There is a danger of injury when assembling the barrier boom.</p> <ul style="list-style-type: none"> – Barrier booms must be installed by two persons.

Opening the barrier housing and switching off the voltage supply



1. Secure barrier danger area e.g. with barrier tape.
2. Remove the barrier housing hood.
3. Remove the barrier housing doors.

WARNING!

Danger of crushing between barrier boom and barrier housing!

4. Switch off power supply. Ensure that the system is powered down. Secure against reactivation. The balancing springs in the lever system are relaxed. The flange is vertical.
5. Push square tube into the barrier boom according to figure Fig. 23 on the flange side.
6. Slightly grease nuts to avoid seizing.
7. Assemble barrier boom with hexagon head screws, washers, spring washers and nuts.

Assemble barrier boom up to 6 metres

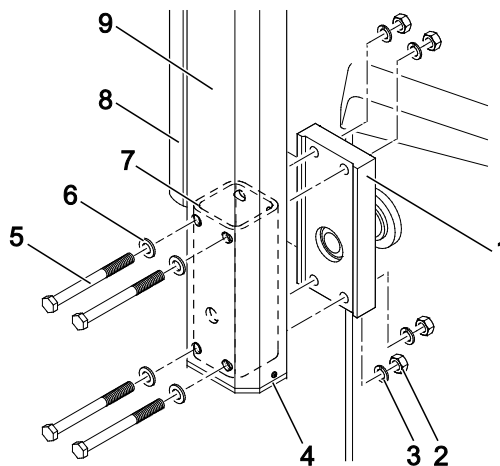


Fig. 23: Assemble barrier boom

- | | |
|-------------------------------|---|
| 1 Flange | 6 Washer (4 pcs) |
| 2 Nut (4 pcs) | 7 Square tube |
| 3 Spring disc (4 pcs) | 8 Edge protection (mount after barrier boom assembly) |
| 4 End cap (2 pcs) | 9 Barrier boom |
| 5 Hexagon head screws (4 pcs) | |

Mount end caps

8. Mount end caps.

Check vertical alignment of the barrier boom up to 6 metres and correct if required

9. Check vertical alignment of the barrier boom with the spirit level.

**WARNING!**

Danger of crushing between balancing springs and spring traverses! Reduce spring tension.

10. Proceed as follows if you have to correct the vertical alignment:

- Measure and record the control size of the balancing springs. The control size is the size between the upper edge of the upper spring traverse to the upper edge of the lower spring traverse.
- If the measured control size is larger than 555 mm, you need to reduce the spring tension. For this, set the control size so that it is at less than 555 mm.
→ Access XL2 and Access XXL:
See page 84, chapter 8.13.2, steps 6 to 9.
- Loosen the 4 hexagon socket screws 10 AF at the two clamping levers. Do not remove the hexagon socket screws.
→ For Access XL2 see page 65, Fig. 24.
→ For Access XXL see page 66, Fig. 25.
- Turn flange shaft and align barrier boom.

Access XL2
Loosen hexagon socket screws

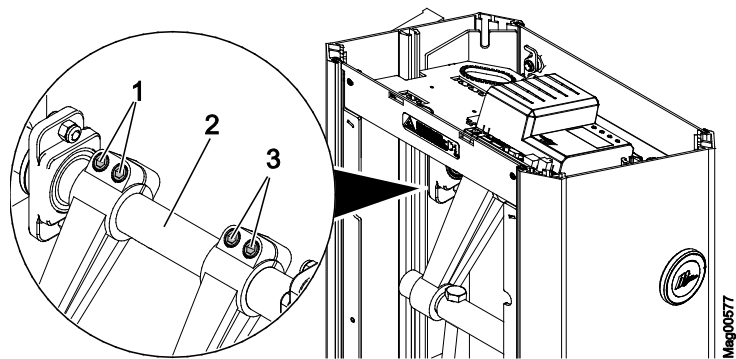


Fig. 24: Access XL2 – Loosen hexagon socket screws

- 1 Clamping lever left, hexagon socket screws M12 (10 AF)
- 2 Flange shaft
- 3 Clamping lever right, hexagon socket screws M12 (10 AF)

Assembly and installation

Access XXL

Loosen hexagon socket screws

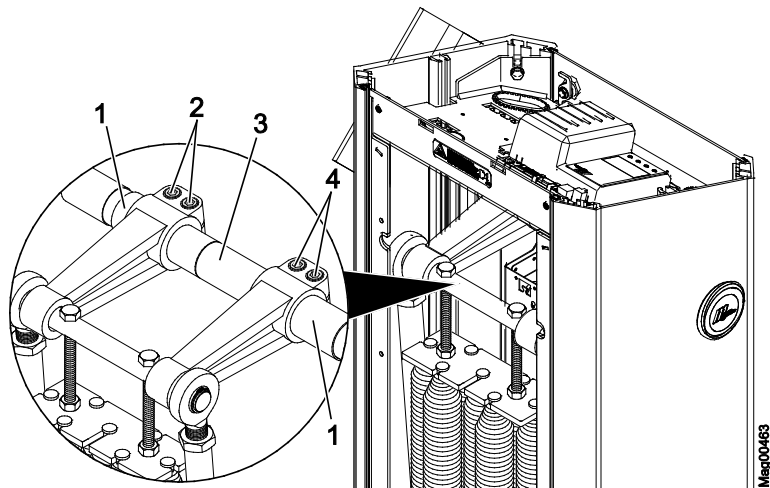


Fig. 25: Access XXL – Loosen hexagon socket screws

- 1 Spacer sleeve
- 2 Clamping lever left, hexagon socket screws M12 (10 AF)
- 3 Flange shaft
- 4 Clamping lever right, hexagon socket screws M12 (10 AF)

After correction of hexagon socket screws, tighten clamping lever and set balancing springs

11. When the alignment of the barrier boom has been corrected, perform the following steps depending on barrier type:

Access XL2:

- Tighten the 4 hexagon socket screws 10 AF at the two clamping levers as follows. Observe that the two clamping levers and the spacer discs are each flush with the ball bearing. The clamping levers must be pushed against the ball bearings.
- Tighten hexagon socket screws of the right clamping lever.
- Slightly lift the left clamping lever and tighten the hexagon socket screws. The spring shaft must not catch and must run freely.
- Tighten the 4 hexagon socket screws 10 AF at the two clamping levers with 120 Nm.

Access XXL:


- Tighten the 4 hexagon socket screws 10 AF at the two clamping levers at 120 Nm. Observe that the two clamping levers and the spacer sleeves are each flush with the ball bearing. The clamping levers must be pushed against the ball bearings.

12. Set recorded control size between the balancing springs.

→ Access XL2 and Access XXL:

See page 84, chapter 8.13.2, steps 6 to 9.

Switch on power supply and Mode "Service "

13. Switch on power supply.
14. Switch the "Service" switch on the control device. The LED lights red. The display backlighting flashes.
15. Manually close the barrier with the middle right button  at the control unit.

Check horizontal alignment of the barrier boom

16. Check horizontal alignment of the barrier boom with the spirit level.



Assemble edge protection

17. Assemble edge protection. → See page 72, chapter 8.11.

Switch off Mode "Service", close barrier housing

18. Switch the "Service" switch on the control device. The LED must light green.
19. Install the barrier housing door.
20. Attach and lock the barrier housing hood.

8.10.2 Assemble barrier boom as of 6 metres**Danger of injury**

 CAUTION	
	<p>Danger of injury!</p> <p>There is a danger of injury when assembling the barrier boom.</p> <ul style="list-style-type: none"> – Barrier booms must be installed by two persons.

Scope of delivery

Barrier booms as of 6 metres are delivered in two packages. The packages comprise the following content:

- Package 1 Large boom profile with a length of up to 5 metres with already installed connector. Edge protection and end caps are loosely included.
- Package 2 Small boom profile

Assembly and installation

Assemble barrier boom

1. Push small boom profile onto connector of the large boom profile.

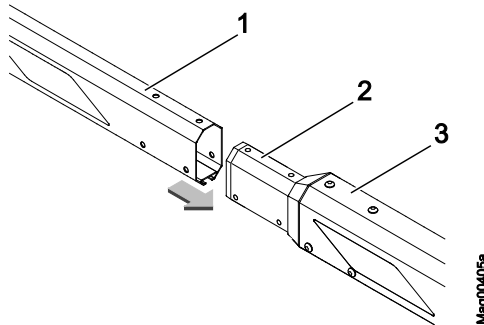


Fig. 26: Push small boom profile onto connector.

- 1 Small boom profile
- 2 Connector
- 3 Large boom profile

2. Install the small boom profile with 6 screws to the large boom profile.

NOTICE!

Barrier boom damage possible!

3. Tighten the screws according to the specified order (see Fig. 27).
 - Torque wrench with Torx T40
 - Tightening torque: 16 Nm

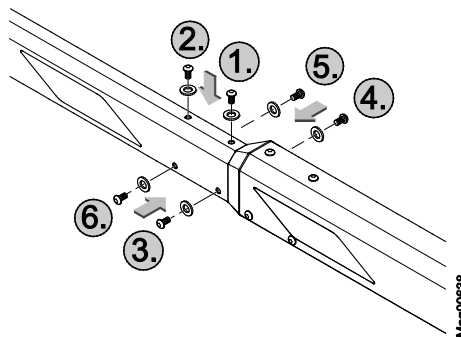


Fig. 27: Assemble the small boom profile

Opening the barrier housing and switching off the voltage supply

1. Secure barrier danger area e.g. with barrier tape.
2. Remove the barrier housing hood.
3. Remove the barrier housing doors.

**WARNING!**

Danger of crushing between barrier boom and barrier housing!

4. Switch off power supply. Ensure that the system is powered down. Secure against reactivation. The balancing springs in the lever system are relaxed. The flange is vertical.

Put barrier boom of 6 metres or more into horizontal position

**WARNING!**

Danger of crushing between balancing springs and spring traverses! Reduce spring tension.

5. Put the flange in the horizontal position. Proceed as follows for this:
 - Measure and record the control size of the balancing springs. The control size is the size between the upper edge of the upper spring traverse to the upper edge of the lower spring traverse.
 - If the measured control size is larger than 555 mm, you need to reduce the spring tension. For this, set the control size so that it is at less than 555 mm.
→ Access XL2 and Access XXL:
See page 84, chapter 8.13.2, steps 6 to 9.
 - Loosen the 4 hexagon socket screws 10 AF at the two clamping levers. Do not remove the hexagon socket screws.
→ For Access XL2 see page 69, Fig. 28.
→ For Access XXL see page 70, Fig. 29.
 - Turn the flange shaft.

Access XL2
Loosen hexagon socket screw

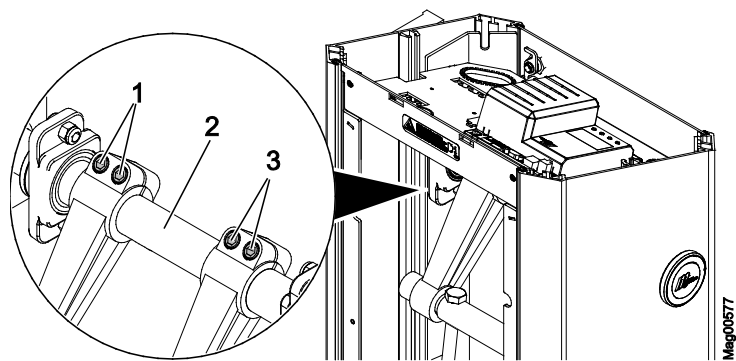


Fig. 28: Access XL2 – Loosen hexagon socket screw

- 1 Clamping lever left, hexagon socket screws M12 (10 AF)
- 2 Flange shaft
- 3 Clamping lever right, hexagon socket screws M12 (10 AF)

Assembly and installation

Access XXL

Loosen hexagon socket screw

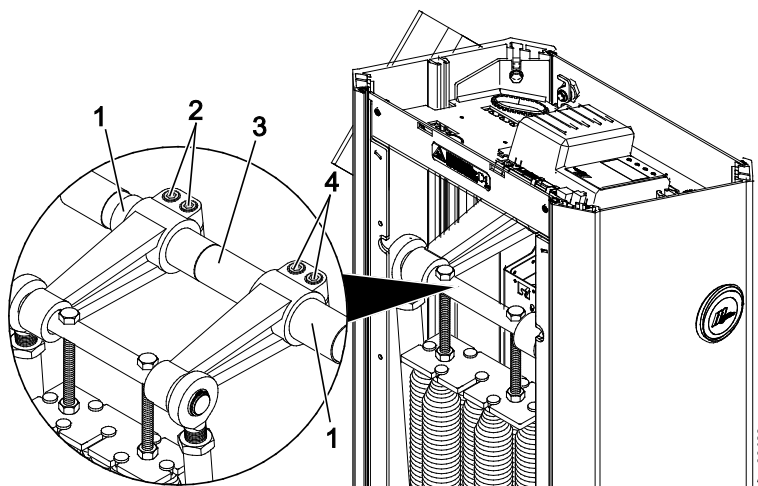


Fig. 29: Access XXL – Loosen hexagon socket screw

- 1 Spacer sleeve
- 2 Clamping lever left, hexagon socket screws M12 (10 AF)
- 3 Flange shaft
- 4 Clamping lever right, hexagon socket screws M12 (10 AF)

Assemble barrier boom as of 6 metres

6. Push square tube into the barrier boom according to figure Fig. 30 on the flange side.
7. Slightly grease nuts to avoid seizing.
8. Assemble barrier boom with hexagon screws, washers, spring washers and nuts.

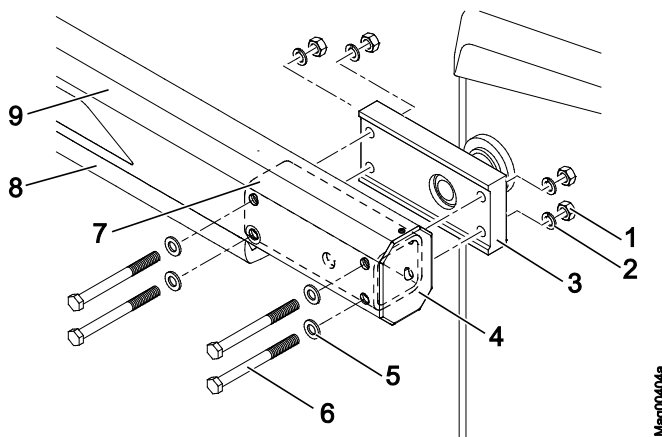


Fig. 30: Assemble barrier boom

- | | |
|-----------------------|--|
| 1 Nut (4 pcs) | 6 Hexagon head screws (4 pcs) |
| 2 Spring disc (4 pcs) | 7 Square tube |
| 3 Flange | 8 Edge protection (mount after boom assembly). |
| 4 End cap (2 pcs) | 9 Barrier boom |
| 5 Washer (4 pcs) | |

Assembly and installation

Put barrier boom with 6 metres or more into vertical position and align vertically

9. Set the barrier to the vertical position with 2 persons.
10. Check vertical position by spirit level.
11. Align barrier boom by turning the flange shaft.
 - For Access XL2 see page 69, Fig. 28.
 - For Access XXL see page 70, Fig. 29.

After correction of hexagon socket screws, tighten clamping lever and set balancing springs

12. When the alignment of the barrier boom has been corrected, perform the following steps depending on barrier type:


Access XL2:

 - Tighten the 4 hexagon socket screws 10 AF at the two clamping levers as follows. Observe that the two clamping levers and the spacer discs are each flush with the ball bearing. The clamping levers must be pushed against the ball bearings.
 - Tighten hexagon socket screws of the right clamping lever.
 - Slightly lift the left clamping lever and tighten the hexagon socket screws. The spring shaft must not catch and must run freely.
 - Tighten the 4 hexagon socket screws 10 AF at the two clamping levers with 120 Nm.

Access XXL:

 - Tighten the 4 hexagon socket screws 10 AF at the two clamping levers at 120 Nm. Observe that the two clamping levers and the spacer sleeves are each flush with the ball bearing. The clamping levers must be pushed against the ball bearings.
13. Set recorded control size between the balancing springs.
 - Access XL2 and Access XXL:
 - See page 84, chapter 8.13.2, steps 6 to 9.

Switch on power supply and Mode "Service "

14. Switch on power supply.
15. Switch the "Service" switch on the control device. The LED lights red. The display backlighting flashes.
16. Manually close the barrier with the middle right button  at the control unit.

Check horizontal alignment of the barrier boom

17. Check horizontal alignment of the barrier boom with the spirit level.

Assemble edge protection and end cap

18. Assemble edge protection. → See page 72, chapter 8.11.
19. Mount end caps of the barrier boom.


Assembly and installation

Switch off Mode "Service",
close barrier housing

20. Switch the "Service" switch on the control device. The LED must light green.
21. Install the barrier housing door.
22. Attach and lock the barrier housing hood.

8.11 Assemble edge protection

Missing edge protection at
the barrier boom

⚠ WARNING	
	<p>Danger from missing edge protection at the barrier boom!</p> <p>Missing edge protection at the barrier boom may cause severe or lethal injuries for persons, bicyclers, cabriolet drivers and motorcycle drivers when the barrier boom closes!</p> <ul style="list-style-type: none">– Assemble edge protection.– If the edge protection is damaged, it must be replaced immediately.



NOTE!

If you use a pendulum support, observe that you must mount part of the edge protection in front of the pendulum support and part of the edge protection behind the pendulum support.

The edge protection is included in the delivery loosely in 2 m pieces. Large and small edge protection is included with barrier booms above 6 metres.

If the barrier was ordered with the light strips option, the barrier boom is delivered with the mounted edge protection.

The number of edge protections is according to the length of the long barrier boom profile.

1. Measure the length of the barrier boom profiles.
2. Shorten edge protection to the required length with a saw. Ensure that you do not compress the edge protection lengthwise. The material elongate when heating.
3. Moisten lateral lower area of the barrier boom onto which the edge protection is pushed with water.
4. Slide edge protection in the barrier boom groove.
5. Slide further edge protections into the intended groove until the edge protection ends flush with the barrier boom.

8.12 Conversion "left version" – "right version"


8.12.1 Left and right version

All MHTM™ MicroDrive barriers are available as "left version" and "right version". → See type code, page 26 and starting on page 27, Fig. 3.

If required, you can also remove the barrier boom yourself from one side of the barrier housing and replace it on the other.

8.12.2 Converting barrier boom up to 6 metres

Danger of injury

⚠ CAUTION	
	<p>Danger of injury!</p> <p>There is a danger of injury when assembling the barrier boom.</p> <ul style="list-style-type: none"> – Barrier booms must be installed by two persons.

Opening the barrier housing and switching off the voltage supply



1. Secure barrier danger area e.g. with barrier tape.
2. Remove the barrier housing hood.
3. Remove the barrier housing doors.

WARNING!

Danger of crushing between barrier boom and barrier housing!

4. Switch off power supply. Ensure that the system is powered down. Secure against reactivation. The balancing springs in the lever system are relaxed. The barrier boom is vertical.
5. Write down control size between the balancing springs. The control size is the size between the upper edge of the upper spring traverse to the upper edge of the lower spring traverse.

Write down control size

Uninstalling barrier boom up to 6 metres

6. Remove barrier boom. → See following figure

Assembly and installation

Uninstalling barrier boom up to 6 metres (continued)

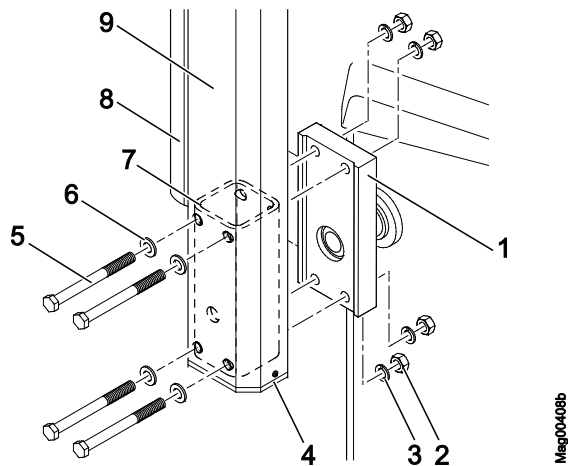


Fig. 31: Remove barrier boom

1	Flange	5	Hexagon head screws (4 pcs)
2	Nut (4 pcs)	6	Washer (4 pieces)
3	Spring disc (4 pcs)	7	Square tube
4	End cap (2 pcs)	8	Edge protection
		9	Barrier boom

Unhook balancing springs

7. Relieve balancing springs. The flange must be upright for this.
8. Perform the following steps depending on barrier type:
 - Access XL2: Chapter 8.13.2, steps 6 and 7.
→ See page 84.
 - Access XXL: Chapter 8.13.2, steps 6 and 7.
→ See page 84.
9. Unhook balancing springs.

Loosen hexagon socket screws, clamping lever

10. Loosen the 4 hexagon socket screws 10 AF at the two clamping levers. Do not remove the hexagon socket screws.
 - For Access XL2 see page 75, Fig. 32.
 - For Access XXL see page 75, Fig. 33.

Access XL2
Loosen hexagon socket screw

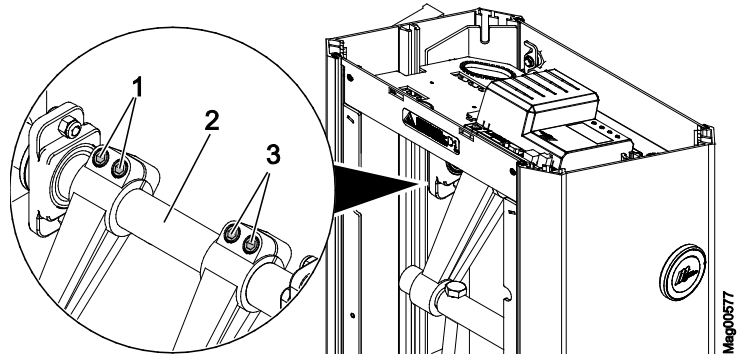


Fig. 32: Access XL2 – Loosen hexagon socket screw

- 1 Clamping lever left, hexagon socket screws M12 (10 AF)
- 2 Flange shaft
- 3 Clamping lever right, hexagon socket screws M12 (10 AF)

Access XXL
Loosen hexagon socket screw

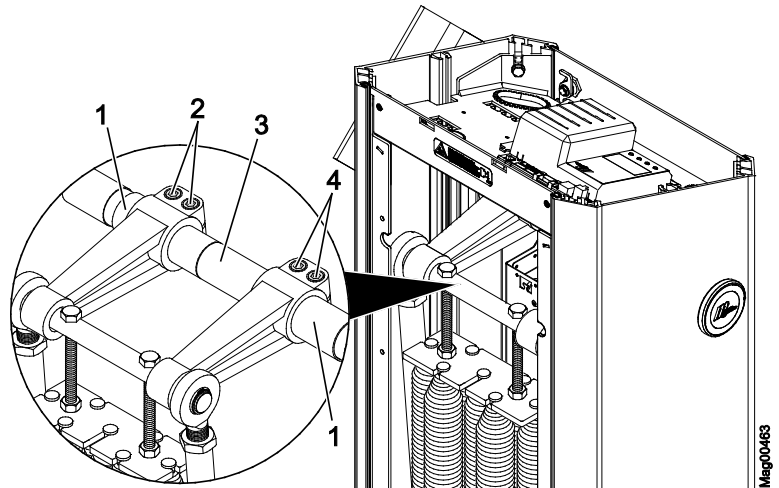


Fig. 33: Access XXL – Loosen hexagon socket screw

- 1 Spacer sleeve
- 2 Clamping lever left, hexagon socket screws M12 (10 AF)
- 3 Flange shaft
- 4 Clamping lever right, hexagon socket screws M12 (10 AF)

Assembly and installation

Convert flange shaft

11. Remove the flange shaft cover disc of the barrier housing. Push a long rod through the flange shaft for this and slightly push it against the cover.
12. Pull out the flange shaft with the flange by rotating movements. To warrant the positions of the clamping levers and spacer discs/sleeves, we recommend tracking a pipe or rod with similar diameter as the flange shaft.
13. Insert the flange shaft with the flange from the other side by rotating movements to the stop of the flange. Observe correct seat of the V-ring. The sealing lip must be flush against the plane area of the plastic ring:
14. Put the flange in the vertical position by turning the flange shaft.

Hook in balancing springs

15. Hook in balancing springs:
16. Apply cover disc for the flange shaft.

Check vertical position of the flange and tighten hexagon socket screws, clamping lever

17. Check and if necessary adjust vertical position of the flange by spirit level.
18. Perform the following steps depending on barrier type:

Access XL2:

- Tighten the 4 hexagon socket screws 10 AF at the two clamping levers as follows. Observe that the two clamping levers and the spacer discs are each flush with the ball bearing. The clamping levers must be pushed against the ball bearings.
- Tighten hexagon socket screws of the right clamping lever.
- Slightly lift the left clamping lever and tighten the hexagon socket screws. The spring shaft must not catch and must run freely.
- Tighten the 4 hexagon socket screws 10 AF at the two clamping levers with 120 Nm.

Access XXL:

- Tighten the 4 hexagon socket screws 10 AF at the two clamping levers at 120 Nm. Observe that the two clamping levers and the spacer sleeves are each flush with the ball bearing. The clamping levers must be pushed against the ball bearings.


Assemble barrier boom

19. Assemble the barrier boom with the flange vertical.
→ See page 74, Fig. 31.

Adjust balancing springs

20. Adjust balancing springs with the noted control size.
 - Access XL2: Chapter 8.13.2, steps 7 to 11.
→ See page 84.
 - Access XXL: Chapter 8.13.2, steps 7 to 11 7.
→ See page 84.

Switch on power supply and Mode "Service "

21. Switch on power supply.
22. Switch the "Service" switch on the control device. The LED lights red. The display backlighting flashes.
23. Manually close the barrier with the middle right button  at the control unit.


Check horizontal alignment of the barrier boom

24. Check horizontal alignment of the barrier boom with the spirit level.

Switch off Mode "Service", close barrier housing

25. Switch the "Service" switch on the control device. The LED must light green.
26. Install the barrier housing door.
27. Attach and lock the barrier housing hood.

8.12.3 Converting barrier boom as of 6 metres**Danger of injury**

⚠ CAUTION	
	<p>Danger of injury!</p> <p>There is a danger of injury when assembling the barrier boom.</p> <ul style="list-style-type: none"> – Barrier booms must be installed by two persons.

Opening the barrier housing and switching off the voltage supply

1. Secure barrier danger area e.g. with barrier tape.
2. Remove the barrier housing hood.
3. Remove the barrier housing doors.

WARNING!**Danger of crushing between barrier boom and barrier housing!**

4. Switch off power supply. Ensure that the system is powered down. Secure against reactivation. The balancing springs in the lever system are relaxed. The barrier boom is vertical.
5. Write down control size of the balancing springs. The control size is the size between the upper edge of the upper spring traverse to the upper edge of the lower spring traverse.

Write down control size

Assembly and installation

Relive balancing springs

6. Relive balancing springs. The flange must be upright for this.
7. Perform the following steps depending on barrier type:
 - Access XL2: Chapter 8.13.2, steps 6 and 7.
→ See page 84.
 - Access XXL: Chapter 8.13.2, steps 6 and 7.
→ See page 84.

Loosen hexagon socket screws, clamping lever and turn flange shaft

8. Loosen the 4 hexagon socket screws 10 AF at the two clamping levers. Do not remove the hexagon socket screws.
→ See following figures.

Access XL2

Loosen hexagon socket screw

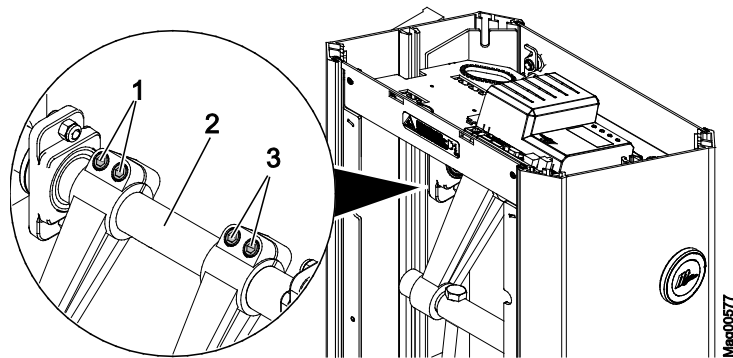


Fig. 34: Access XL2 – Loosen hexagon socket screw

- 1 Clamping lever left, hexagon socket screws M12 (10 AF)
- 2 Flange shaft
- 3 Clamping lever right, hexagon socket screws M12 (10 AF)

Access XXL

Loosen hexagon socket screw

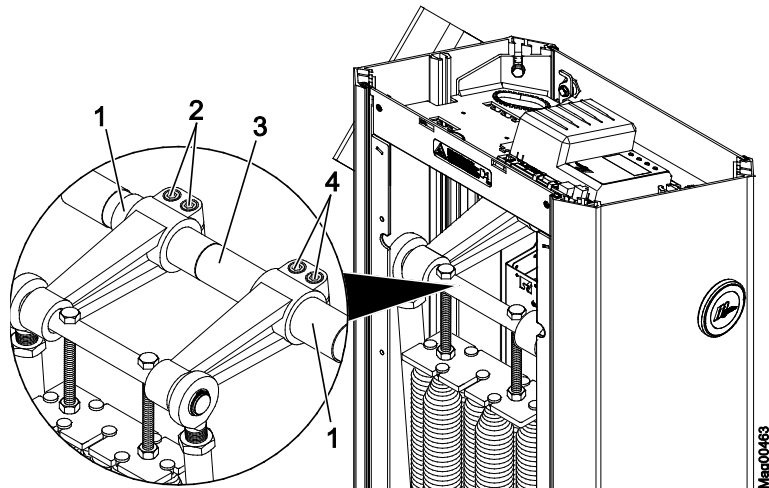


Fig. 35: Access XXL – Loosen hexagon socket screw

- 1 Spacer sleeve
- 2 Clamping lever left, hexagon socket screws M12 (10 AF)
- 3 Flange shaft
- 4 Clamping lever right, hexagon socket screws M12 (10 AF)

Assembly and installation

- Turn flange shaft until the barrier boom tip touches the ground. Perform step with 2 persons.

Uninstalling barrier boom as of 6 metres

- Remove barrier boom. → See following figure

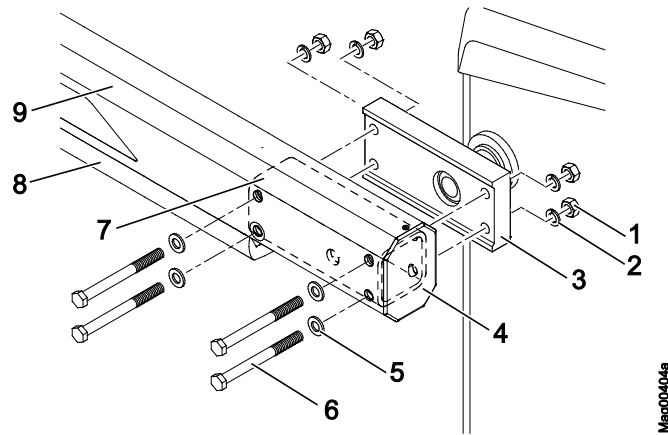


Fig. 36: Remove barrier boom

- | | | | |
|---|---------------------|---|-----------------------------|
| 1 | Nut (4 pcs) | 5 | Washer (4 pcs) |
| 2 | Spring disc (4 pcs) | 6 | Hexagon head screws (4 pcs) |
| 3 | Flange | 7 | Square tube |
| 4 | End cap (2 pcs) | 8 | Edge protection |
| | | 9 | Barrier boom |

Unhook balancing spring

- Unhook balancing springs.

Convert flange shaft

- Remove the flange shaft cover disc of the barrier housing. Push a long rod through the flange shaft for this and slightly push it against the cover.
- Pull out the flange shaft with the flange by rotating movements. To warrant the positions of the clamping levers and spacer discs/sleeves, we recommend tracking a pipe or rod with similar diameter as the flange shaft.
- Insert the flange shaft with the flange from the other side by rotating movements to the stop of the flange. Observe correct seat of the V-ring. The sealing lip must be flush against the plane area of the plastic ring:
- Put the flange in the vertical position by turning the flange shaft.

Hook in balancing springs

- Hook in balancing springs:
- Apply cover disc for the flange shaft.

Assembly and installation

Assemble barrier boom as of 6 metres

18. Put the flange in the horizontal position by turning the flange shaft.
19. Install the barrier boom with two persons with the horizontal flange. → See page 79, Fig. 36.
20. Set the barrier to the vertical position with 2 persons.

Check vertical position of the flange and tighten hexagon socket screws, clamping lever

21. Check and if necessary adjust vertical position by spirit level.
22. Perform the following steps depending on barrier type:
 - Access XL2
 - Tighten the 4 hexagon socket screws 10 AF at the two clamping levers as follows. Observe that the two clamping levers and the adjusting washers are each flush with the ball bearing. The clamping levers must be pushed against the ball bearings.
 - Tighten hexagon socket screws of the right clamping lever.
 - Slightly lift the left clamping lever and tighten the hexagon socket screws. The spring shaft must not catch and must run freely.
 - Tighten the 4 hexagon socket screws 10 AF at the two clamping levers with 120 Nm.


Access XXL

- Tighten the 4 hexagon socket screws 10 AF at the two clamping levers at 120 Nm. Observe that the two clamping levers and the spacer sleeves are each flush with the ball bearing. The clamping levers must be pushed against the ball bearings.

Adjust balancing springs

23. Adjust balancing springs with the noted control size.
 - Access XL2 y Access XXL: Chapter 8.13.2, steps 7 to 11 7. → See page 84.

Switch on power supply and Mode "Service "

24. Switch on power supply.
25. Switch the "Service" switch on the control device. The LED lights red. The display backlighting flashes.
26. Manually close the barrier with the middle right button  at the control unit.

Check horizontal alignment of the barrier boom


27. Check horizontal alignment of the barrier boom with the spirit level.


Switch off Mode "Service",
close barrier housing

28. Switch the "Service" switch on the control device. The LED must light green.
29. Install the barrier housing door.
30. Attach and lock the barrier housing hood.

8.13 Check and set the balancing springs in the lever system

Danger of crushing, lever system

⚠ WARNING	
	<p>Danger of crushing at opened barrier housing at the lever system!</p> <p>The lever system in the barrier housing can cause serious crushing injuries!</p> <ul style="list-style-type: none"> – Balancing springs in the lever system must only be checked and adjusted by specialised personnel. – Balancing springs must only be checked and adjusted with the power supply turned off – Wear protective gloves if necessary.

NOTICE	
	<p>The barrier system can be damaged by improper repair!</p> <p>Other considerable damage may result from improper repair.</p> <ul style="list-style-type: none"> – Replace all springs if a spring is broken.

The lever system has balancing springs that exactly balance the barrier boom weight. These balancing springs are pre-set in the factory. The precise setting must be performed after assembly of the barrier boom and before commissioning.

The lever force is determined not only by the spring tension but also by the number of springs used and the spring rate. Magnetic uses two spring types. Depending on application case, you will have to set the spring tension, remove the springs, use additional springs or use springs with a different spring rate.
→ See also page 86, chapter 8.13.3.

In the "Power failure" menu, you can set the barrier behaviour in case of voltage failure. → See separate document "Description of control units MGC and MGC Pro for MHTM™ MicroDrive barriers".

Assembly and installation

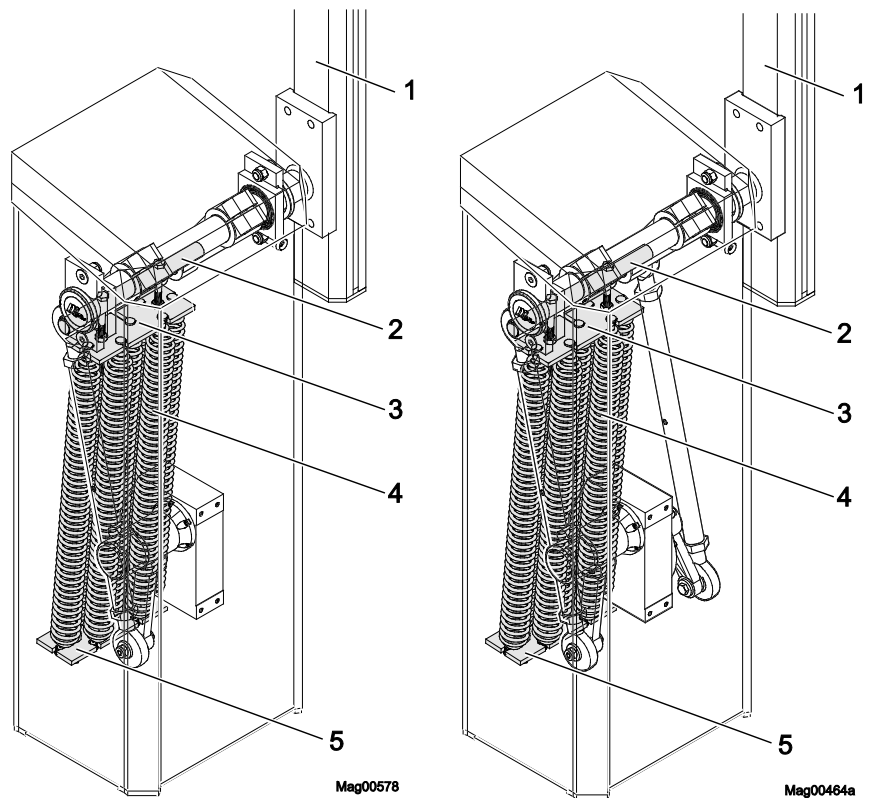


Fig. 37: Balancing springs in the lever system
left: Access XL2, right: Access XXL

- 1 Barrier boom
- 2 Spring shaft
- 3 Upper spring traverse
- 4 Balancing spring
- 5 Lower spring traverse

8.13.1 Check setting of balancing springs

Check balancing springs with the motor warm from operation.

1. Secure barrier danger area e.g. with barrier tape.



WARNING!

Danger of crushing between barrier boom and barrier housing!

2. Switch off power supply. Ensure that the system is powered down. Secure against reactivation.
3. Manually put the barrier boom in the 30°-position. If required, push the lever arm from the dead point manually via the coupling rod. → See page 116, chapter 12.2.

Assembly and installation

4. Let go of barrier boom.
 - If the barrier boom stays in the 30° position, the balancing springs are set correctly.
 - If the barrier boom does not stay in the 30° position, the balancing springs must be adjusted. If the barrier boom opens after it released from the 30° position, the balancing springs are too strongly pre-tensioned. If the barrier boom closes after it released from the 30° position, the balancing springs are too weakly pre-tensioned.

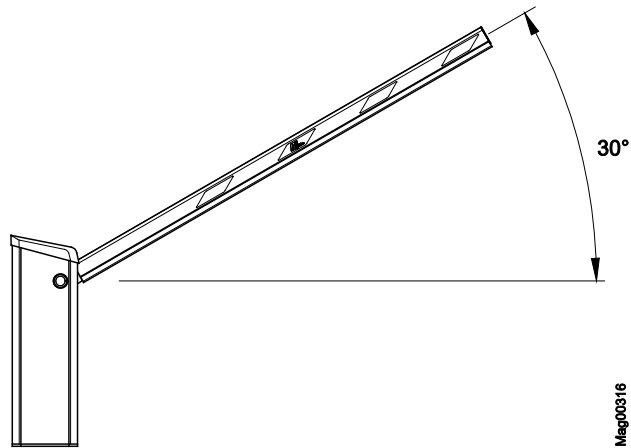


Fig. 38: Opening angle barrier boom 30°

Assembly and installation

8.13.2 Setting balancing springs

Improper setting of the balancing springs

WARNING



Danger from improper setting of the balancing springs!

Improper setting of the balancing springs may cause damage to the spring suspension and thus uncontrolled, quick closing of the barrier boom. Uncontrolled, quick closing of the barrier boom may cause severe or potentially fatal injury!

- Set springs precisely according to the instructions in chapter 8.13.2. Always align the upper spring traverse and spring shaft in parallel. The admissible deviation is no more than 1 mm (< 1 mm).
- If required, contact Magnetic Service.

1. Secure barrier danger area e.g. with barrier tape.
2. Remove the barrier housing hood.
3. Remove the barrier housing doors.



WARNING!

Danger of crushing between barrier boom and barrier housing!

4. Switch off power supply. Ensure that the system is powered down. Secure against reactivation.
5. The balancing springs must be relieved. For this, put the barrier boom in the vertical position.

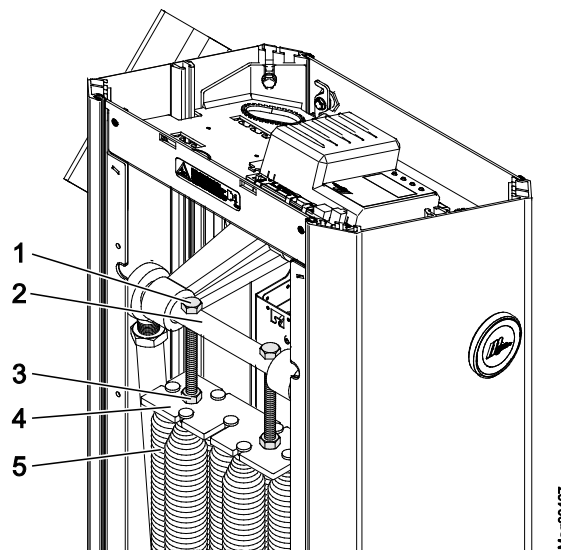


Fig. 39: Setting balancing springs Access XL2 and Access XXL

- 1 Hexagon head screws M16 (24 AF)
 - 2 Spring shaft
 - 3 Counter nut M16 (24 AF)
 - 4 Upper spring traverse
 - 5 Balancing spring
6. Evenly loosen the M16 nuts (Fig. 39, item 3).
 7. Use a 24 AF wrench to alternately turn the two hexagon screws in the respective direction by approx. one turn.
 - Increasing spring tension: Turn hexagon screw clockwise.
 - Reducing spring tension: Turn hexagon screw counter-clockwise.
 8. Check parallelism of the upper spring traverse to the spring shaft. For this, measure the distance between the upper spring traverse and the spring shaft at both ends of the spring traverse.
 9. Tighten M16 nuts.
 10. Check barrier boom position according to chapter 8.13.1.
→ See page 82.
 11. If required, repeat steps 6 to 8 until the barrier boom is balanced in the 30° position.
 12. Switch on power supply.
 13. Install the barrier housing door.
 14. Attach and lock the barrier housing hood.

Assembly and installation

8.13.3 Overview table balancing springs



NOTE!

The following overview tables "Balancing springs" do not take into consideration any attachment parts. For barrier booms with attachment parts, the required number of springs may deviate from the number of springs in the overview table.

Overview table balancing springs for barriers Access XL2 and Access XXL without pendulum support

Blocking width [m]	Number springs weak	Number springs strong ¹⁾	Control size [mm] ²⁾
4,0	2	–	551
4,1	2	–	551
4,2	2	–	551
4,3	2	–	555
4,4	2	–	565
4,5	2	–	576
4,6	3	–	551
4,7	3	–	551
4,8	3	–	551
4,9	3	–	551
5,0	3	–	551
5,1	3	–	551
5,2	3	–	552
5,3	3	–	560
5,4	3	–	569
5,5	3	–	577
5,6	4	–	551
5,7	4	–	551
5,8	4	–	551
5,9	4	–	551
6,0	4	–	553
6,1	4	–	558
6,2	4	–	562
6,3	4	–	565
6,4	4	–	569
6,5	4	–	573
6,6	4	–	577
6,7	4	–	580

Assembly and installation

Blocking width [m]	Number springs weak	Number springs strong ¹⁾	Control size [mm] ²⁾
6,8	5	–	551
6,9	5	–	551
7,0	5	–	551
7,1	5	–	551
7,2	5	–	551
7,3	5	–	553
7,4	5	–	556
7,5	5	–	560
7,6	5	–	564
7,7	5	–	567
7,8	5	–	571
7,9	5	–	575
8,0	5	–	578
8,1	6	–	551
8,2	6	–	551
8,3	6	–	551
8,4	6	–	552
8,5	6	–	556
8,6	6	–	559
8,7	6	–	562
8,8	6	–	565
8,9	6	–	569
9,0	6	–	572
9,1	6	–	576
9,2	6	–	580
9,3	7	–	551
9,4	7	–	552
9,5	7	–	555
9,6	7	–	558
9,7	7	–	562
9,8	7	–	565
9,9	7	–	569
10,0	7	–	572
10,1	7	–	585
10,2	7	–	579
10,3	6	1	551
10,4	6	1	551
10,5	6	1	552

Assembly and installation

Blocking width [m]	Number springs weak	Number springs strong ¹⁾	Control size [mm] ²⁾
10,6	6	1	555
10,7	6	1	559
10,8	6	1	561
10,9	6	1	564
11,0	6	1	568
11,1	5	2	551
11,2	5	2	551
11,3	5	2	551
11,4	5	2	551
11,5	5	2	552
11,6	5	2	555
11,7	5	2	558
11,8	5	2	561
11,9	5	2	564
12,0	5	2	567
12,1	5	2	570
12,2	4	3	551
12,3	4	3	551
12,4	4	3	552
12,5	4	3	554
12,6	4	3	558
12,7	4	3	560
12,8	4	3	563
12,9	4	3	566
13,0	4	3	569
13,1	3	4	551
13,2	3	4	551
13,3	3	4	553
13,4	3	4	556
13,5	3	4	558
13,6	3	4	561
13,7	3	4	564
13,8	3	4	567
13,9	3	4	569
14,0	2	5	551
14,1	2	5	553
14,2	2	5	555
14,3	2	5	558

Assembly and installation

Blocking width [m]	Number springs weak	Number springs strong ¹⁾	Control size [mm] ²⁾
14,4	2	5	560
14,5	2	5	563
14,6	2	5	566
14,7	2	5	569
14,8	–	6	567
14,9	–	6	570

1) The strong springs are marked yellow at the suspension bolt.

2) Control size: Size between the upper edge of the upper spring traverse to the upper edge of the lower spring traverse

Table 14: Overview table balancing springs for barriers Access XL2 and Access XXL without pendulum support

Assembly and installation

8.13.4 Equipment plan balancing springs

The balancing springs are placed as follows in the Access XL2 and Access XXL barriers.

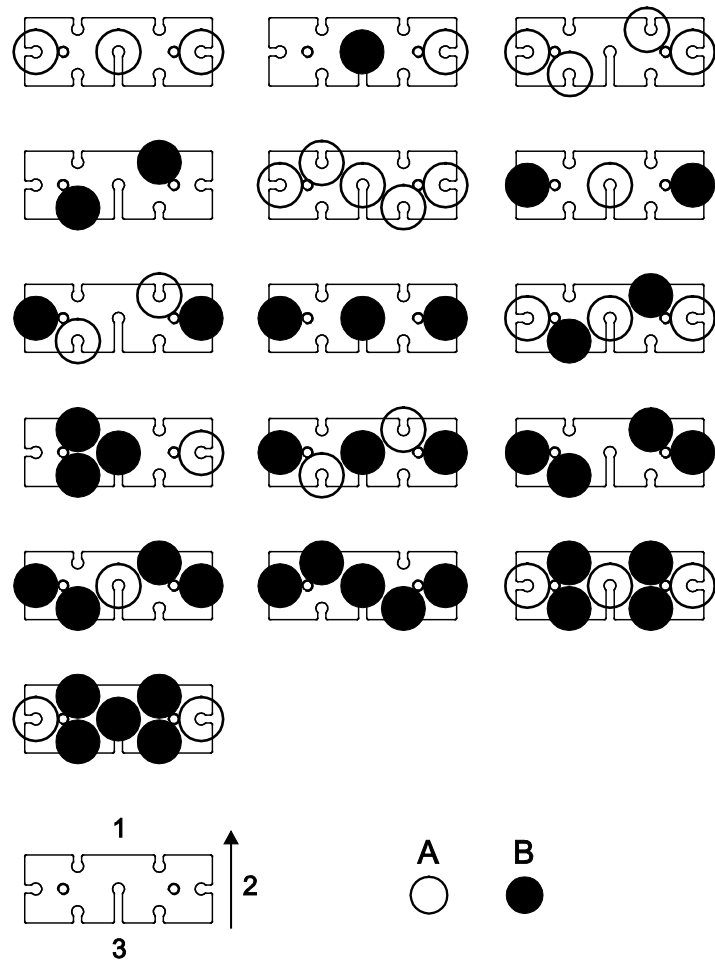



Fig. 40: Equipment plan balancing springs Access XL2 and Access XXL

- 1 Front
- 2 Barrier boom
- 3 Rear

- A Weak springs
- B Strong springs
(marked yellow at the suspension bolt)

8.14 Align barrier housing and post

Falling components

⚠ WARNING	
	<p>Risk of injury from falling components! Falling components such as the barrier housing can cause severe injury!</p> <ul style="list-style-type: none"> – When aligning the barrier housing and nesting post, loosen the attachment screws only slightly. – Tighten the attachment screws again after alignment.



NOTE!

You can set the nesting post height.
→ See page 92, chapter 8.15.

Alignment conditions for nesting post

The barrier boom must run centrally into the nesting post fork.


Alignment conditions for light barrier

Transmitter and receiver of the light barrier must be aligned with each other for an object to be securely detected. For final alignment, transmitter and receiver must be electrically connected.
→ See page 102, chapter 9.4.4.

1. Slightly loosen the barrier housing and post attachment screws.
2. Align barrier housing and post with each other.
3. Tighten the barrier housing and post attachment screws again.
4. Seal barrier housing with a Silicon joint according to page 59, Fig. 20

8.15 Set nesting post height

Danger of crushing

⚠ CAUTION	
	<p>Crushing danger between the fork at the nesting post and the barrier boom!</p> <p>Fingers and hands can be crushed when the barrier boom runs into the nesting post when closing.</p> <ul style="list-style-type: none"> – Switch off power supply during assembly. – Do not hold on to fork from the inside. Wear safety gloves if required.

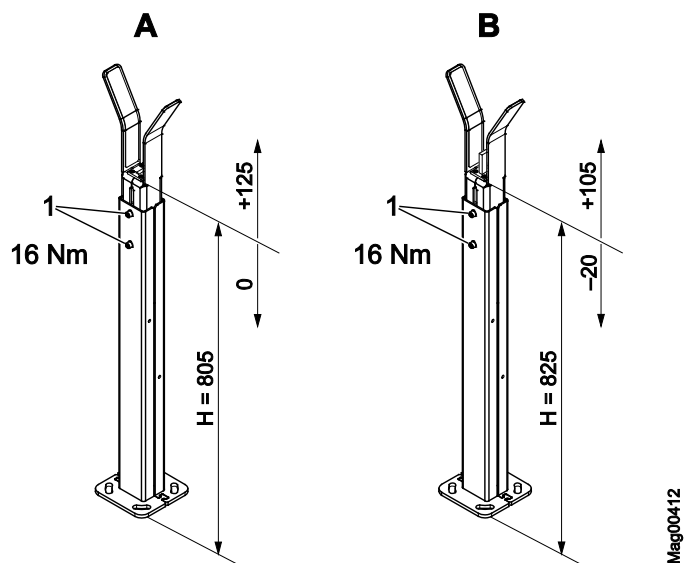


Fig. 41: Set nesting post height (dimensions in mm)

- A Nesting post
- B Nesting post with lock
- H Reference height

- 1 Torx screws

You may set the nesting post height, e.g. to balance out level differences in the foundations.

1. Loosen the two Torx screws until the nesting post fork can be moved. Hold on to the fork.
2. Set the fork to the desired height.
3. Tighten the two Torx screws with 16 Nm.

8.16 Stick on prohibition signs

The delivery includes two prohibition signs as stickers. Attach the prohibition signs to the barrier boom according to the following drawing.

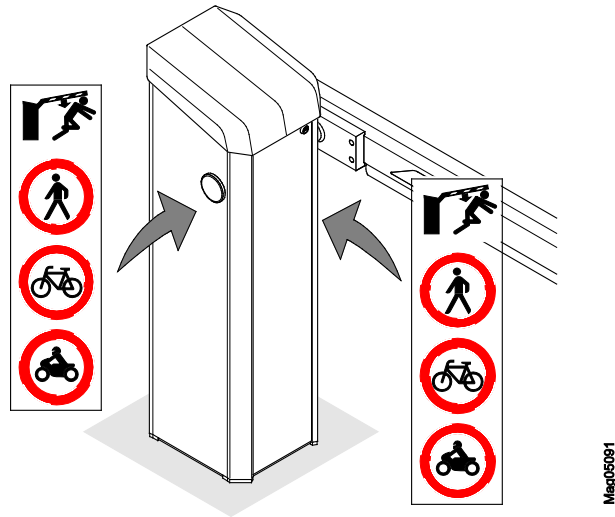


Fig. 42: Apply prohibition signs, shown here for barrier type



NOTE!

When a motorcycle loop is installed, the lower prohibition sign must be cut off.

8.17 Check assembly and installation

The following points must be checked after assembly and installation of the barrier:


- Are all foundation anchors firmly fixed?
- Did you check and adjust the balancing springs?
- Are all screws firmly tightened?
- Have all barrier housing covers been properly assembled?
- Are warning signs applied?

9 Electrical connection


9.1 Safety

→ See also safety notes on page 16, chapter 2.6 "Occupational safety and special dangers".


Electric voltage

⚠ DANGER	
	<p>Mortal danger by electric voltage!</p> <p>Touching live parts can be lethal. Damage to the insulation or to individual components can be lethal.</p> <ul style="list-style-type: none">– Switch off the power supply immediately in case of damage to the insulation and arrange repair.– Only electrical specialists may carry out work on the electrical system.– Switch off power supply and secure against re-activation before performing any work. Test for absence of voltage!– Never bypass or deactivate fuses.– When replacing fuses observe the correct amperage specification.– Keep moisture and dust away from live parts. Moisture or dust may cause a short circuit. If the electrical connection is established during precipitation, e.g. rain or snow, penetration of moisture must be prevented by suitable measures, such as a protective cover.


General

⚠ WARNING	
	<p>Danger by inappropriate installation!</p> <p>Inappropriate installation can cause severe or lethal injuries.</p> <ul style="list-style-type: none">– Only electrical specialists must perform any electrical installation tasks.– Pay attention to tidiness and cleanness at the assembly site! Loosely stacked or lying around components and tools are accident sources.– Tighten all screws correctly.

Hot surfaces

⚠ CAUTION	
	<p>Danger of burns!</p> <p>The motor surface may be hot. Touching this hot surface can lead to burns.</p> <ul style="list-style-type: none"> – Do not touch these hot surfaces. – After switching off the power supply wait some minutes until the motor has cooled down. – Wear protective gloves if necessary.

Electromagnetic interference

NOTICE	
	<p>Electromagnetic interferences may cause malfunctions of the barrier or adjacent devices!</p> <p>The barrier is approved for industrial, residential, commercial a business use. Operation in other electro-magnetic environmental conditions may cause interferences or malfunctions.</p> <ul style="list-style-type: none"> – Place control lines and mains cables into separate conduits – Use cables according to the electrical circuit plan. – Only install and apply additional parts approved by Magnetic. – The electrical and electronically additional parts must be EMC verified and must not exceed the indicated EMC limit values.

Personal protective equipment

The following must be worn during all installation work:

- Work clothes
- Protective gloves
- Safety shoes
- Protective helmet.

Electrical connection


9.2 Installing electrical protective devices

The safety installations that are required according to regional and local regulations must be provided by the customer. Usually these are:

- Residual current device (RCD)
- Circuit-breaker
- Lockable 2-pole main switch acc. to EN 60947-3.

9.3 Connecting the power cable

Electric voltage

⚠ DANGER	
	<p>Mortal danger by electric shock!</p> <p>If the mains supply is not connected to the terminal clamps correctly, loosens from the connection clamps and touches the housing or door, there is a direct danger to life from electric shock.</p> <ul style="list-style-type: none">– Only electrical specialists may carry out work on the electrical system.– Connect power supply according to the following description.– Install electrical protective devices according to chapter 9.2.



NOTE!

The wire cross-section of the mains line must be between 1.5 and 4 mm². Observe national provisions on line length and associated cable cross-section.



DANGER!


Mortal danger by electric voltage!

1. Disconnect barrier system power supply. Ensure that the system is powered down. Secure against reactivation.

Electrical connection

Strip-off cable and core insulation – preparation of the wiring

- Strip-off mains supply and cores according to the following figure.

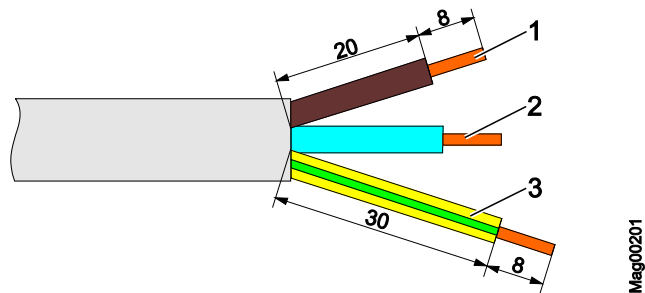


Mag00201

Fig. 43: Strip-off the mains supply (dimensions in mm)

- Phase
- Zero conductor
- Earth conductor

Mains supply placement

- Connect the mains supply with the intended terminal clamps X1: L / N / PE) in the barrier housing according to the following figures. → See "Wiring diagram".
 - Place mains supply properly in the barrier housing. The line must not get into moving components.
 - Attach power supply to the metal tabs with 2 cable ties.

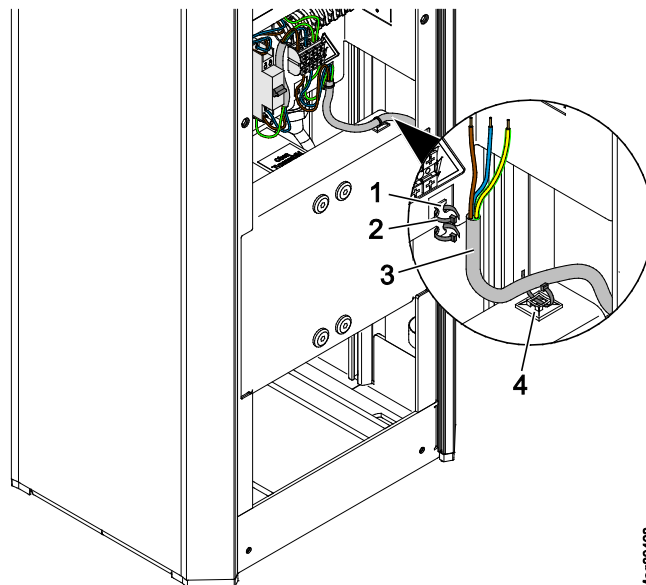

Mag00468

Fig. 44: Mains supply placement
Access XL2 and Access XXL

- Cable tie metal tabs
- Cable binder
- Mains supply
- Access XL2 and Access XXL:
Additional attachment option at the motor traverse

Electrical connection

Connecting the power cable

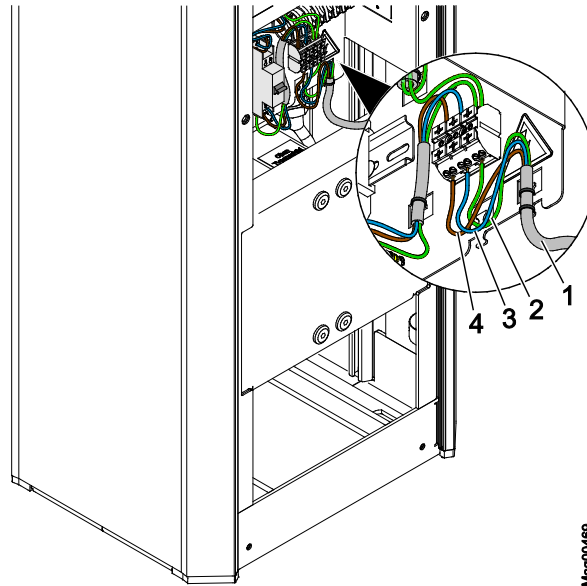


Fig. 45: Connecting the power cable
Access XL2 and Access XXL

- 1 Power cable terminals
- 2 Earth conductor PE
- 3 Zero conductor N
- 4 Phase L

9.4 Connect customer's control lines (signalling devices)

The following connections are available for control and feedback on customer's side:

- 8 Digital inputs for controlling the barrier.
- 4 Digital outputs to feed back information.
- 6 Relays outputs to feed back information. 3 Relays are normally-open (NO) and 3 relays are change-over contacts.



DANGER!

Mortal danger by electric voltage!

1. Disconnect barrier system power supply. Ensure that the system is powered down. Secure against reactivation.

Connecting the control lines

2. Guide control lines into the connection space through the line penetrations.
 - Properly place control lines behind the cable clamps. The control lines must not get into moving components.
 - Attach control lines to metal tabs if required.
3. Connect control lines according to wiring diagram.

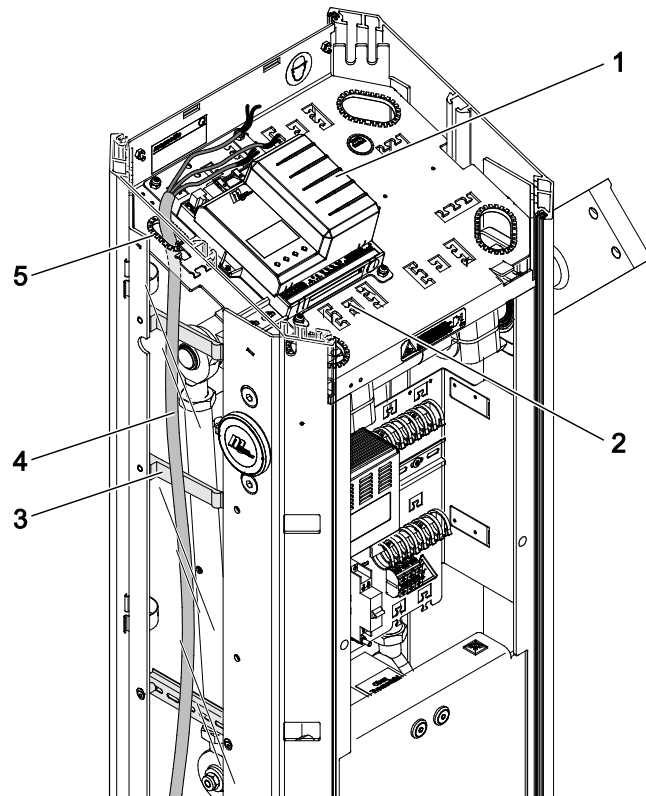


Fig. 46: Connecting the control lines
Access XL2 and Access XXL

- 1 Control unit
- 2 Cable tie metal tabs
- 3 Cable clamps
- 4 Control line
- 5 Line penetration

Electrical connection

9.4.1 Connecting safety devices

As safety devices, you must connect safety loops or safety light barriers to the control unit. Safety loops must only be connected to monitor vehicles. Only Magnetic safety light barriers must be used.

If you connect a safety loop, the barrier closes only after the safety loop is clear. If you connect a safety light barrier, the barrier closes only after the safety light barrier is clear.

9.4.2 Plausibility check of the safety devices



NOTE!

The plausibility check is deactivated by default in barriers in Deadman operation at a closing speed of ≥ 2.2 seconds.

The plausibility check prevents that the barrier can be operated without safety device or with defective safety device.

When the voltage supply is switched on, it is verified that at least one safety device was passed by a vehicle or person within three barrier openings. In operation, the number is increased to ten barrier openings.

If the plausibility check fails, the barrier is decommissioned for reasons of safety. The message "Safety device missing" appears on the display.



NOTE!

The input function "Additional safety device" must only be used for additional monitoring devices. The input function is not considered in the plausibility check. A safety loop always has to be connected to the detector module or a testable safety light barrier at the clamps X11 and X20.

Procedure at failed plausibility check

1. Remove cause for failed plausibility check.
2. Reset the barrier. → See page 115, chapter 12.1.

9.4.3 Connecting safety loop

The safety loop is connected to the plug-in module "Detector1 (A-B)", clamps A or clamps B. → See "Wiring diagram".

The clamp function parameters can be set in the menu "Detector 1 (A-B)" with the parameters "Mode A" or "Mode B". → See separate document "Description of control units MGC and MGC Pro for MHTM™ MicroDrive barriers".

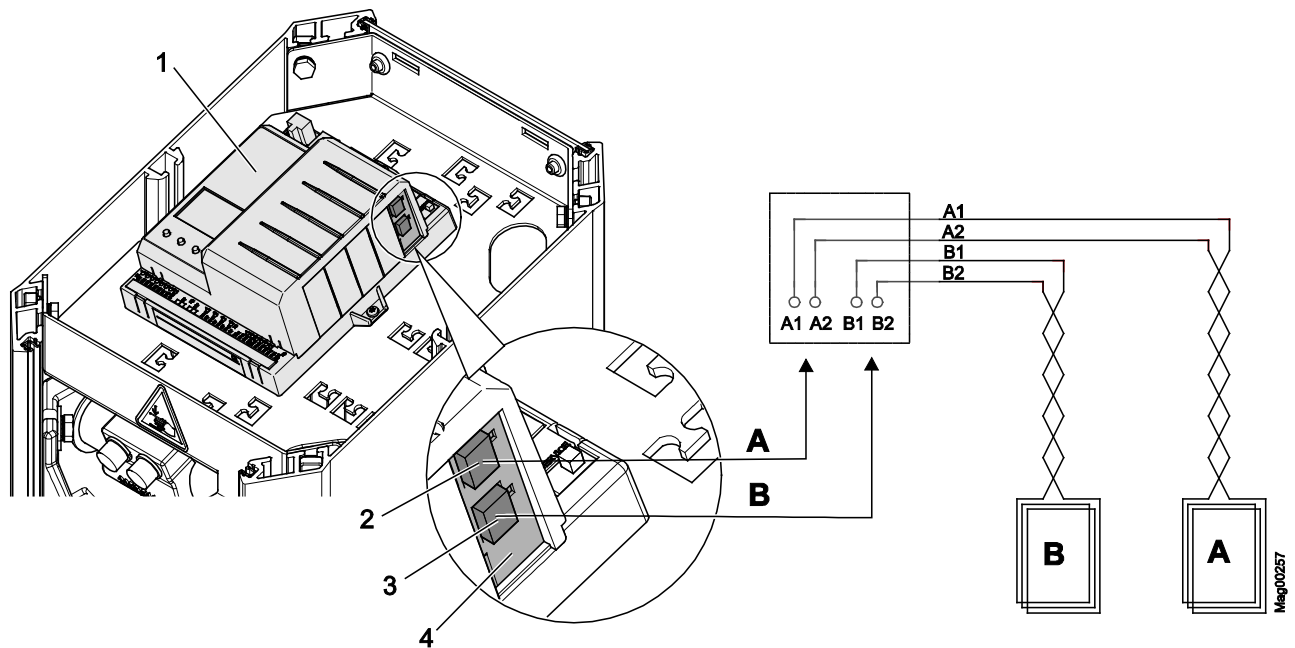


Fig. 47: Connecting safety loops

- 1 Control unit
- 2 Connection of induction loop A
- 3 Plug-in module "Detector 1 (A-B)"
- 4 Connection of induction loop B
- A Induction loop A
- B Induction loop B

**NOTE!**

If four induction loops must be supervised, you can connect another plug-in module with the "Detector" function into the control unit. This plug-in module registers as "Detector 2 (C-D)". To prevent mutual interference between the induction loops, we recommend using a plug-in module instead of an external detector.

Electrical connection

9.4.4 Connect and test the safety light barriers

Connecting safety light barrier

Connect the transmitter and receiver connection lines of the safety light barriers to clamps X11 and X20.

By default, Magnetic installs a jumper between terminals X11 OUT and IN. When a safety light barrier is connected, the jumper must be removed.

→ See "Wiring diagram".

Aligning the safety light barrier

The receiver is mounted at the post and the transmitter at the barrier housing. Alternatively, the receiver can also be installed to an opposite barrier housing.

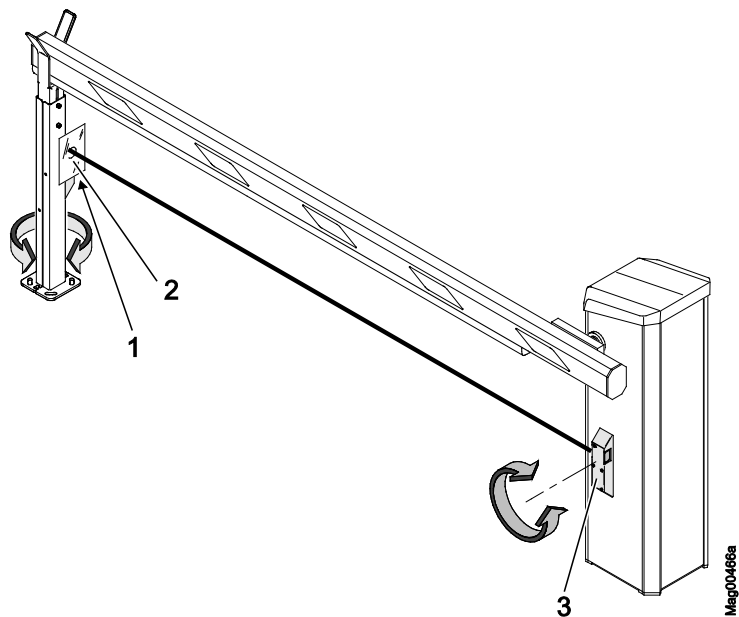


Fig. 48: Use reflex foil

- 1 Receiver, covered by reflective foil
- 2 Reflective foil
- 3 Transmitter

1. There must not be any objects between the transmitter and receiver. The light path must be free.
2. Switch on power supply.
3. The green LEDs at the transmitter and receiver must be lit.

4. Align receiver with transmitter. If required, hold the included reflective foil in front of the receiver as setting aid. The yellow LED at the receiver lights up when aligned correctly. Align receiver as follows:
 - Slightly loosen the post attachment screws.
 - Turn the post, until the yellow LED at the receiver is lit.
 - Tighten attachment screws of the post.
5. Keep reflective foil in the barrier housing.

Check safety light barrier function

Perform function test by holding an object into the light path between the transmitter and receiver.

The following items must be met:

- The yellow LED at the receiver must go out.
- The barrier cannot be closed.

9.4.5 Connecting emergency opening contacts

Fire-fighter switch, emergency opening contacts, etc. are connected to the "Open high priority" input. When the signal is applied to this input, the barrier opens. While the signal is present, the barrier cannot be closed.

→ See "Wiring diagram".

9.4.6 Digital inputs**Technical data**

→ See page 33, chapter 4.3.

**NOTE!**

The digital input functions can be freely parameterised. → For parametrisation of the digital inputs, see separate document "Description of control units MGC and MGC Pro for MHTM™ MicroDrive barriers".

Electrical connection

Factory setting

Clamp	Description	Function
IN1	Input 1	Open low priority
IN2	Input 2	Open low priority
IN3	Input 3	Opening with vend count
IN4	Input 4	Open high priority
IN5	Input 5	External opening loop exit
IN6	Input 6	Close
IN7	Input 7	Close
IN8	Input 8	Boom contact

Table 15: Factory settings "Digital inputs"

9.4.7 Digital outputs and output relays

Technical data

→ See page 33, chapter 4.3.



NOTE!

The digital output and output relay functions can be freely parameterised. → For parameterisation of the digital inputs, see separate document "Description of control units MGC and MGC Pro for MHTM™ MicroDrive barriers".

Factory setting

Clamp	Description	Function
DO1	Digital output 1	Locking
DO2	Digital output 2	Pulse after passage
DO3	Digital output 3	Signal light A
DO4	Digital output 4	Signal light B
NO1	Relay 1	Open
NO2	Relay 2	Closed
NO3	Relay 3	Error
NO4/NC4	Relay 4	Loop active A
NO5/NC5	Relay 5	Loop active B
NO6/NC6	Relay 6	Signal light C

Table 16: Factory settings "Digital outputs" and "Relay outputs"

9.5 Checking the electrical connection

The following points have to be checked after the electrical installation of the barrier:


- Are the following electrical protective devices installed: lockable 2-pole main switch, circuit breaker and leakage current fault interrupter?
- Is the power cable connected to the terminal in compliance with chapter 9.3?
- Are the induction loops connected according to the wiring diagram?
- Are the safety light barriers connected according to the wiring diagram?
- Are the control lines connected according to wiring diagram?
- Have all barrier housing covers been properly assembled?

10 Start-up and operation


10.1 Safety

→ See also safety notes on page 16, chapter 2.6 "Occupational safety and special dangers".

General

⚠ WARNING	
	<p>Danger by inappropriate start-up and operation! Inappropriate start-up and operation can cause severe or lethal injuries.</p> <ul style="list-style-type: none">– Commissioning and operation must be performed by specialists or electrical specialists.– Always observe the radius of action of the barrier boom.– Prior to start of works ensure that all housing covers are correctly mounted.

High wind loads

⚠ WARNING	
	<p>Risk of injury from the barrier boom tearing off in case of too-high wind loads!</p> <p>The barriers are designed for wind load classes purs. to EN 12424. Refer to page 29, chapter 4.1.4 (XL2); page 32, chapter 4.2.4 (XXL). Use of the barriers in higher wind load classes than indicated is forbidden.</p> <p>The barrier boom may tear off at too-high wind loads and cause severe injury.</p> <p>Therefore, the following applies in case of storm warnings:</p> <ul style="list-style-type: none">– Stop operating the barrier system.– Secure barrier boom with suitable measures.

Personal protective equipment

The following must be worn during start-up:

- Work clothes
- Protective gloves
- Safety shoes
- Protective helmet.

10.2 Commissioning

Check before to initial start-up

The following inspections must be performed prior to initial start-up:


- Check electrical connections.
- Check barrier boom position.
- Check balancing springs in the lever system and adjust if required.

Inspection during the first start-up

The following inspections must be performed prior to first start-up:

- Check programme mode. → See separate document "Description of control units MGC and MGC Pro for MHTM™ MicroDrive barriers", chapter "Select programme mode".
- Check parameterisation in connection with wiring.
- Testing and setting the operating frequency of the induction loops. → See separate document "Description of control units MGC and MGC Pro for MHTM™ MicroDrive barriers", chapter "Detector 1 (A-B)".
- Check the function of the barrier, induction loops, and the signalling devices.

10.3 Switching on and off the barrier

NOTICE	
	<p>A too early mains voltage power up after a shut down can result in damage of the equipment!</p> <ul style="list-style-type: none">– Wait for at least 10 seconds after shutting off the mains voltage before you switch the mains voltage on again.

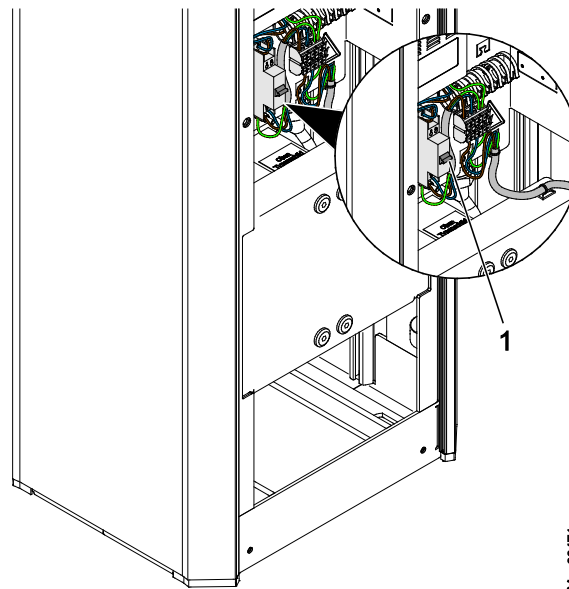


Fig. 49: Switching on and off barrier
Access XL2 and Access XXL

1 2-pole mains switch

Switching on

1. Remove the barrier housing hood.
2. Remove the barrier housing door.
3. Switch on the barrier via the 2-pole mains switch.
4. Depending on the settings in the "Start-up behaviour" menu, the barrier boom slowly moves into the top end position (homing run) or stops.
5. Mount the door.
6. Attach and lock the hood.

Switching off

1. Remove the barrier housing hood.
2. Remove the barrier housing door.
3. Switch off the barrier via the 2-pole mains switch.
4. Depending on the settings of the lever system's balancing spring and the settings in the menu "Power failure", the barrier boom opens or closes. → See separate document "Description of control units MGC and MGC Pro for MHTM™ MicroDrive barriers", chapter "Power failure".
5. Mount the door.
6. Attach and lock the hood.

10.4 Open and close the barrier manually

You can only open and close the barrier manually in the "Service" mode.






Fig. 50: Service switch

- 1 Mode "Service" on
- 2 Mode "Service" off

1. Switch the "Service" switch for the "Service" mode. The LED lights red. The display backlighting flashes.
2. Perform one of the following functions:
 - Push middle left button : Manually open the barrier.
 - Push middle right button : Manually close the barrier.
3. Switch "Service" switch. The LED must light green.

Mag00206b

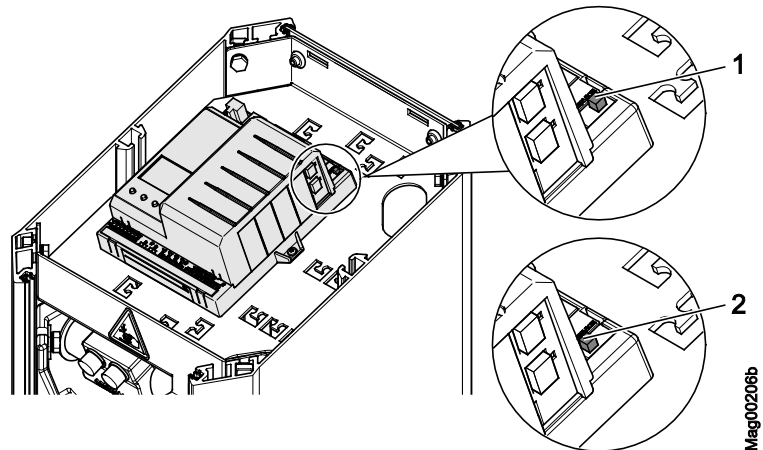

NOTE!

For reasons of safety, the first barrier boom motion after switching between programme mode and service mode is performed at slow speed.

10.5 Putting the barrier temporarily out of operation

High wind speeds

⚠ WARNING	
	<p>Risk of injury from barrier boom in case of high wind speeds!</p> <p>The barrier boom is no longer securely locked with the mains voltage off. At high wind speeds, the barrier boom can be pressed from its end position. The moving barrier boom can severely injure a person.</p> <ul style="list-style-type: none">– Keep supplying the barrier with mains voltage.– Remove the barrier boom if necessary.

NOTICE	
	<p>Possible damage to the equipment by condensed water when mains voltage is switched off!</p> <ul style="list-style-type: none">– Keep supplying the barrier with mains voltage.

If the barrier is put out of operation for a longer period, proceed as follows:


1. Switch off barrier. → See page 108, chapter 10.3.
2. Remove the barrier boom if necessary. → See page 119, chapter 13.3.
3. Protect the barrier from corrosion and contamination.
4. Switch on barrier. → See page 108, chapter 10.3.

11 Cleaning and maintenance

11.1 Safety

→ See also safety notes on page 16, chapter 2.6 "Occupational safety and special dangers".

General

⚠ WARNING	
	<p>Danger by inappropriate cleaning and maintenance!</p> <p>Inappropriate cleaning and maintenance can cause severe or lethal injuries.</p> <ul style="list-style-type: none"> – All cleaning and maintenance work must be performed by specialists or electrical specialists. – Prior to work, ensure that there is sufficient assembly space. – Pay attention to tidiness and cleanness at the assembly site! Loosely stacked or lying around components and tools are accident sources. – After completion of maintenance work, ensure that all covers are correctly mounted. – Wear protective helmet.

Personal protective equipment

The following must be worn during maintenance work:

- Work clothes
- Protective gloves
- Safety shoes
- Protective helmet.

Maintenance book

In barriers where personal traffic cannot be excluded, a maintenance book must be maintained.


In any other barriers, maintenance of a test book is not mandatory. However, we recommend keeping a test book in such barriers as well, to properly document all maintenance work.

Cleaning and maintenance

11.2 Cleaning

The cleaning interval essentially depends on the environmental conditions and the climate.

Aggressive cleaning aids and substances

NOTICE	
	<p>Unit damage possible!</p> <p>Aggressive detergents and consumables may damage or destroy components, electric cables, or the coating of the barrier.</p> <ul style="list-style-type: none">– Do not use cleaning agents with aggressive ingredients.

11.3 Cleaning from the outside

Clean the barrier housing and the barrier boom at regular intervals.

11.4 Clean barrier housing from the inside

Carrying out cleaning work:

1. Switch off power supply and secure against restarting.



DANGER!

Mortal danger by electric voltage!

- Keep moisture and dust away from live parts. Moisture or dust may cause a short circuit.
 - Never clean the barrier housing and barrier boom with vapour or pressure-jet cleaners.
2. Remove contamination from the outside of the barrier housing properly using water with washing-up liquid and a square of cloth. Do not bring control units and electrical components in contact with moisture.
 3. Remove dust inside the housing with a vacuum cleaner.
 4. After cleaning work, check that all previously opened covers are closed again and that all safety equipment functions correctly.

11.5 Maintenance schedule

The following describes the maintenance work that is necessary for safe optimal, trouble-free operation. Maintenance intervals must be observed.

If increased wear of individual components or functional groups is revealed during regular inspections, the operator must reduce the required maintenance intervals on the basis of the actual signs of wear.

In case of questions on maintenance work and intervals, contact your dealer. Spare parts are available from your dealer. The address can be found on your delivery receipt, invoice or the rear of these instructions.

Interval	Maintenance work	To be carried out by
Monthly	Visual inspection of the housing, inside and out, for damage and corrosion. Clean the housing and repair paint damage as necessary. Remove corrosion damage.	Specialist
	Visual inspection of foundation anchors, attachment profiles and mounting material for corrosion. Remove corrosion damage.	Specialist
	Visual inspection of the barrier boom for damage and corrosion. Clean the barrier boom and repair paint damage as necessary. Remove corrosion damage.	Specialist
	Visual inspection of additional parts, such as nesting posts and the pendulum support, for damage and corrosion. Clean additional parts and repair paint damage. Remove corrosion damage.	Specialist
	Where they exist, inspect lenses and mirrors of the light barriers.	Specialist
Every 6 months	Perform all monthly maintenance work.	Specialist
	Check function of the residual current operated device	Electrician
	Check the barrier housing fastening screws for tightness. If required, tighten the screws.	Specialist
	Check the barrier boom and flange fastening screws for tightness. If required, tighten the screws.	Specialist
	Check the screws of the system parts, such as pendulum support and nesting post, for tightness. If required, tighten the screws.	Specialist

Cleaning and maintenance

Interval	Maintenance work	To be carried out by
Every 12 months	Perform all monthly and semi-annual maintenance work.	Electrician / specialist
	Check the barrier's mechanics.	MHTM MicroDrive service specialist
	Check balancing springs for changes, such as length and thickness. Change all balancing springs if there are any changes.	
	Check the settings of the balancing springs and adjust them if necessary.	
	Check the spring setting of the lever system.	
	Check barrier boom position.	
	Visual inspection of the induction loops and the carriageway in the area of the loops for damage.	
	Check the induction loops' function. → See separate document "Description of control units MGC and MGC Pro for MHTM™ MicroDrive barriers", chapter "Detector 1 (A-B)".	
	Check the induction loops. Measure the contact resistance, insulation resistance, and inductivity of the induction loops. → See page 55.	
	Where they exist, check the function of additional safety equipment, such as light barriers.	
	Check the barrier's function.	
	Check the barrier's locking in the position "Closed".	
	Check the advanced warning on barriers with the active function "Traffic lights lead".	
	Check electric cables for damages.	
	Check if all electrical connections are firm.	
Check signs and labels for completeness and legibility.		

Table 17: Maintenance schedule

12 Malfunctions

**NOTE!**

For troubleshooting, see separate document "Description of control unit MGC and MGC Pro for barrier MHTM™ MicroDrive (Doc.ID: 5816,0006)".

12.1 Reset the barrier

Control unit reset is performed as follows:

- Switch of power supply and switch it on again after 10 seconds.
- or
- Press the two middle operating buttons on the control unit display for 5 seconds.


NOTICE**Damage to the unit by too-short switching intervals of the mains voltage!**

- To avoid damage to the equipment the power must remain shut off for at least 10 seconds.

Malfunctions

12.2 Closing or opening the barrier boom in case of power failure

Danger of crushing, lever system!

⚠ WARNING	
	<p>Danger of crushing at opened barrier housing at the lever system!</p> <p>The lever system in the barrier housing can cause serious crushing injuries!</p> <ul style="list-style-type: none">– Only specialists must manually close or open the barrier boom at voltage failure.– Wear protective gloves.

In case of power failure, the barrier boom may be in the lower or upper dead point. I.e. the barrier boom can no longer be easily moved manually. In this case, proceed as follows:

1. Remove the barrier housing hood.
2. Remove the barrier housing door.
3. Push the coupling rod from the dead point manually. See following figures.
4. Mount the door if applicable.
5. Attach and lock the hood if applicable.

Access XL2

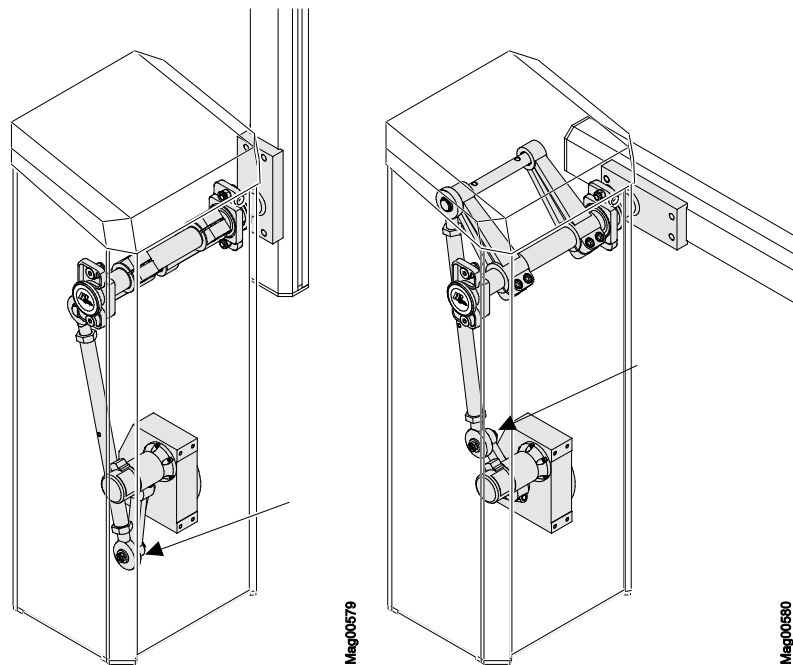


Fig. 51: Access XL2, manually close or open barrier boom

Access XXL

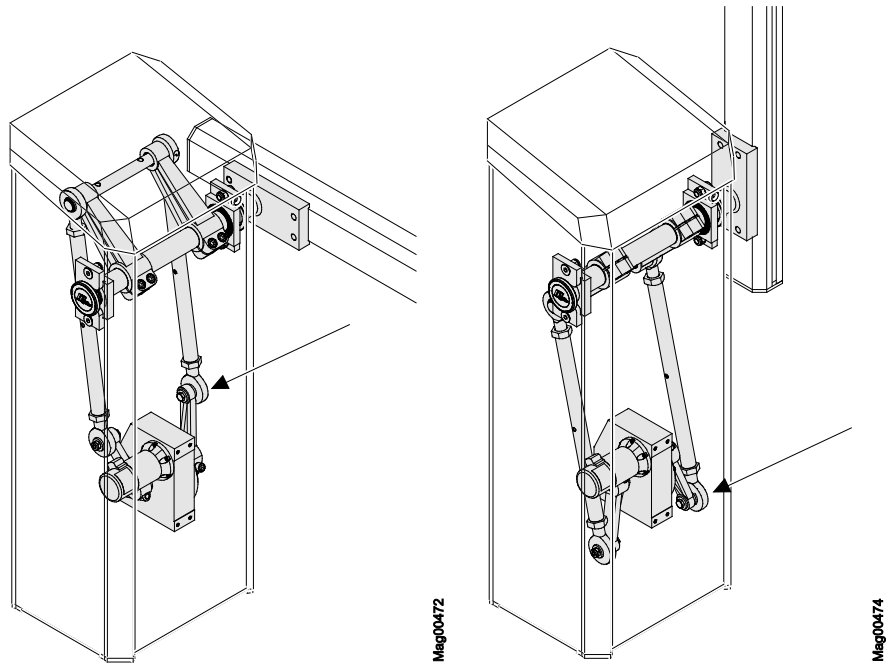


Fig. 52: Access XXL, manually close or open barrier boom


Repair

13 Repair


13.1 Safety

→ See also safety notes on page 16, chapter 2.6 "Occupational safety and special dangers".

General

⚠ WARNING	
	<p>Danger by inappropriate repair!</p> <p>Inappropriate repair can cause severe or lethal injuries.</p> <ul style="list-style-type: none">– All repair work must only be performed by authorised MHTM service specialists.– Prior to work, ensure that there is sufficient assembly space.– Pay attention to tidiness and cleanness at the assembly site! Loosely stacked or lying around components and tools are accident sources.– Only use original spare parts or spare parts approved of by Magnetic.– After completion of repair work, ensure that all covers are correctly mounted.

Switching off power supply


⚠ WARNING	
	<p>Risk of injury and damage by switching off power supply of the barrier!</p> <p>In case the power supply is switched off and the barrier boom is not mounted, the drive unit and the lever system may be damaged or cause severe or lethal injuries.</p> <ul style="list-style-type: none">– Only switch off power supply when either the barrier boom is mounted or the balancing springs in the lever system are relaxed. If the balancing springs are relaxed, the flange is vertical.

Personal protective equipment

The following must be worn during all repair work:

- Work clothes
- Protective gloves
- Safety shoes
- Protective helmet.


13.2 Spare parts

⚠ WARNING	
	<p>Risk of injury by incorrect spare parts! Incorrect or defective spare parts can result in damage, malfunctions or total failure and also impair safety.</p> <ul style="list-style-type: none"> – Only use original spare parts or spare parts approved of by Magnetic.

Procure spare parts via your dealer. The address can be found on your delivery receipt, invoice or the rear of these instructions.

Spare part lists can be obtained on request.

13.3 Replacing the barrier boom**Danger of injury**

⚠ CAUTION	
	<p>Danger of injury! There is a danger of injury when mounting the barrier boom.</p> <ul style="list-style-type: none"> – Barrier booms must be installed by two persons.

1. Secure barrier danger area e.g. with barrier tape.
2. Remove the barrier housing hood.
3. Remove the barrier housing doors.

**WARNING!****Danger of crushing between barrier boom and barrier housing!**

4. Switch off power supply. Ensure that the system is powered down. Secure against reactivation. The balancing springs in the lever system are relaxed. The flange is vertical.
5. Replace and assemble the barrier boom.
 - For barrier booms up to 6 metres, see page 73, chapter 8.12.2.
 - For barrier booms as of 6 metres, see page 77, chapter 0.

14 Decommissioning, disassembly and disposal

A barrier that is no longer usable should not be recycled as a complete unit, but disassembled into individual components and recycled according to material types. Non-recyclable materials have to be disposed of in an environmental-friendly manner.

- Decommissioning, disassembly and disposal of the barrier may only be carried out by specialised staff.
- Disassemble the barrier in reverse order from assembly.
- The barrier has to be disposed of in accordance with the respective country-specific regulations.



NOTE!

For expert information regarding disposal of electric equipment contact Magnetic or competent electricians.

EU-Declaration of conformity



The manufacturer MAGNETIC AUTOCONTROL GmbH this is to certify that the delivered product:

Designation	Barrier MHTMTM MicroDrive
Type	Access XL2*^{1), 2)} Access XXL*¹⁾ 1) Installation of the safety devices according to operating instructions required. 2) Compliance with the impact forces pursuant to EN 13241: For barrier booms up to a blocking width up to 6.5 m only at medium and slow speed. For barrier booms as of a blocking width of 7 m at all speeds.
From serial no	10218486

Corresponds to the conformity of:

Directive 2006/42/EC (machine directive) amended by **2009/127/EC**

Directive 2014/35/EU (low voltage directive)

Directive 2014/30/EU (EMC directive)

Directive 2011/65/EU (RoHS directive)

Realized harmonized norms (or parts of them):

EN ISO 12100:2011-03

Safety of machinery – General principles for design – Risk assessment and risk reduction

EN 60204-1:2006/AC:2010

Safety of machinery – Electrical equipment of machines – Part 1: Specifications for general requirements

EN 61000-6-2:2005/AC:2005

Electromagnetic compatibility (EMC) – Part 6-2: Generic standard – Immunity for industrial environments

EN 61000-6-3:2007/A1:2011/AC:2012

Electromagnetic compatibility (EMC) – Part 6-3: Generic standard – Emission standard for residential, commercial and light-industrial environments

EN ISO 13849-1:2008/AC:2009

Safety of machinery – Safety-related parts of control systems – Part 1: General principles for design

EN 13241-1:2003/AC:2011

Industrial, commercial and garage doors and gates – Product standard – Part 1: Products without fire resistance or smoke control characteristics

This declaration is not a guarantee of characteristics in the sense of product liability law. The safety regulations of the operating instructions have to be observed.

MAGNETIC AUTOCONTROL GmbH
Grienmatt 20-28
79650 Schopfheim

Documentation Engineer
Mr. Stefan Wellinger

Schopfheim, 10.09.2019

Place and date

Signature

Index

A

Assemble	
Barrier boom as of 6 metres	67
Barrier boom up to 6 metres	64
Barrier housing Access XL2	59
Barrier housing Access XXL	59
Edge protection	72
Receiver	63
Safety light barrier	62
Transmitter	62
Assembly and installation	
Required steps	46
Assembly site	
Access XL2	48
Access XXL	48
Light barrier posts	51
Nesting post	51
B	
Balancing springs	82, 85
Access XL2	84
Access XXL	84
Check	81
Equipment Access XL2	90
Equipment Access XXL	90
Setting	81
Barrier	
Manually close	109
Manually open	109
Barrier boom	35
Barrier control unit	See control unit
Barrier housing	35
Assemble	59
Mounting material	59
Open	58
C	
Changes	14
Check	
Assembly	93
Before to initial start-up	107
Electrical connection	105
Installation	93
Cleaning	112
Commissioning	107
Connecting the power cable	96
Construction products directive	10
Control size	86, 89
Control unit	
Technical data	33

Control unit MGC	7
Control unit MGC Pro	7
Conversion	
Barrier boom as of 6 metres	77
Barrier boom up to 6 metres	73
Copyright	9
Customer service	10
D	
Danger area	24
Decommissioning	120
Temporarily	110
Design	35
Digital inputs	103
Digital outputs	104
Dimensions	
Access XL2	27
Access XXL	30
Disassembly	120
Disposal	120
E	
Edge protection	
Assemble	72
Electrical connection	94
Electrical specialists	15
Empty conduit	
Light barrier	52
Empty conduits	
Access XL2	48, 49
Access XXL	48, 49
Light barrier	52
Environmental protection	11
EU-Declaration of conformity	10
EU-Declarations of conformity	121
F	
Foundation	35
Access XL2	48, 49
Access XXL	48, 49
Light barrier post	52
Nesting post	52
Foundation plan	52
Access XL2	49
Access XXL	49
Function	36
G	
General	7
H	
Hazard Notes	17

Index

I		
Identification.....	25	
Induction loops.....	53, 56, 57	
Planning notes.....	40	
Inspection		
During the first start-up.....	107	
Instructed People.....	15	
Intended use.....	12	
L		
Limitation of liability.....	9	
Loop detector plug-in module		
Technical data.....	34	
Loops.....	See induction loops	
Lorry loops.....	40, 41	
Lorry/passenger car loops.....	42, 43	
Lower spring traverse.....	82	
M		
Maintenance.....	111	
Maintenance schedule.....	113	
Malfunctions.....	115	
MGC.....	7	
MGC-Pro.....	7	
MHTM™ MicroDrive service expert.....	15	
MicroBoom-XL.....	35	
Modifications.....	14	
Mounting material		
Barrier housing.....	59	
Post.....	61	
N		
Nesting post.....	35	
Non-intended use.....	13	
O		
Occupational safety.....	16, 17	
Operating Instructions.....	7	
Operating personnel		
Requirements.....	15	
Output relay.....	104	
P		
Parameterisation.....	7	
Passenger car loops.....	42	
Pendulum support.....	35	
Performance declaration.....	10	
Personal protective equipment.....	16	
Pictogram explanation.....	8	
Plausibility check		
Procedure.....	100	
Post		
Mounting material.....	61	
Prohibition signs.....	93	
R		
Radio plug-in module		
Technical data.....	34	
Reinforcement		
Access XL2.....	48, 50	
Access XXL.....	48, 50	
Reset barrier.....	115	
S		
Safety.....	12	
Cleaning.....	111	
Commissioning.....	106	
Electrical connection.....	94	
Maintenance.....	111	
Operation.....	106	
Repair.....	118	
Transport.....	37	
Safety devices		
Connect.....	100	
Plausibility check.....	100	
Safety light barrier.....	62	
Align.....	102	
Check function.....	103	
Connect.....	100	
Safety loops		
Connect.....	100	
Scope of delivery.....	10	
Service switch.....	109	
Spare parts.....	119	
Specialists.....	15	
Requirements.....	15	
Spring setting.....	81	
Spring shaft.....	82, 85	
Spring traverse.....	82	
Storage.....	39	
Switching off.....	109	
Switching on.....	108	
T		
Technical data		
Access XL2.....	27	
Access XXL.....	30	
Transport.....	39	
Transport inspection.....	38	
Type code.....	26	
Type plate.....	25	
U		
Unpacking.....	58	
Upper spring traverse.....	82	

W

Warning notes	8
Warranty	10

MAGNETIC AUTOCONTROL GMBH

Grienmatt 20
79650 Schopfheim
Germany

Sales partner

Telephone +49 7622 695 5
Fax +49 7622 695 802
info@magnetic-germany.com
www.magnetic-access.com



F10044462

Doc.ID: 5815,0009EN
Version: 08